

User Manual





*Specification

- # Measures Muzzle Velocity from 30 m/s \sim 400 m/s (90 ft/s \sim 1200 ft/s).
- ※ ROF range: 100~5000RPM
- ※ Extra large caliber (diameter 36mm)
- ** Tripod Ready mounting hole (Screw for standard camera / camcorder tripods)
- ₩ Use AAA battery*4
- Support Micro-USB(5V/0.5A) power input(no battery charge function)
- * Weight: 290g without battery.
- Size: L x W x H = 130 x 108 x 61 (mm).
- *All the specifications and contents in this manual are subject to change without notice.
- *All the specifications and contents are only for reference, please make the object as the standard.

*Product information

- AC6000 is an airsoft chronograph with high quality and accuracy
- ◎ User-friendly interface with 128*128 pixel OLED in white color.
- © Support Micro-USB(5V/0.5A) power input(no battery charge function) or Use AAA battery*4
- $\ igotimes$ Ammo parameter setting supports 5 memory slots
- © 25 memory slots for velocity and ROF (Rate Of Fire)
- Auto-calculate MAX, MIN, AVG from shot memory slots
- O Idling and low battery auto power off function.
- © Tripod ready mounting hole (standard camera screw / camcorder tripods)
- © Large caliber for 36mm, suitable for different BB Spec. 4.5mm, 6mm, 9mm, 18mm.

*Panel Introduction



*MENU

@AMMO: Set BB information




5 memory slots for setting BB weight (WT) & Caliber (CAL)

OUNIT: Unit Setting




- ** ROF : Rate Of Fire RPM : Round Per Minute RPS : Round Per Second ** SPEED : Initial Velocity
 - SPEED : Initial Velocity m/s : Meter per Second ft/s : Feet Per Second

♦SCR1 :Screen 1

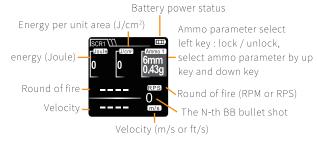

♦SCR2 :Screen 2

 

Upper column: Display for ROF Lower column: Display for Velocity

OAPO: Auto Power Off



Auto power off after idling for 5 ~ 60minutes for power saving.

When battery power is very low, the Chrono shuts down automatically.

OCONTRAST : OLED contrast



- ***** ADJUST : 0 ~ 15
- ***** DEFAULT: 7

ORESET: Factory Default



- ※ Reset AC6000 and recover factory default values.
- * The IR sensor shall be calibrated after resetting AC6000

*Each part of description


Body - lightweight, durable and easy to carry



Stereo operation keys - easy to operate



*Battery Description

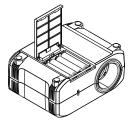

- 1. Push out the battery cover.
- 2. Put in 4 AAA batteries.
- 3. Close the battery cover.
- 4. Do Not install the used and new batteries at the same time for better device performance, safety and stability.
- 5. When device is not used for a longer period, please take out the batteries to prevent device malfunction from battery leakage.