

P★M

NON-BLOWBACK ★ 4.5mm (0.177")
STEEL
BBS
AIR GUN

 


CO2 Cartridges is not included

MADE IN TAIWAN

AAKC44 系說明書

AAKC44 INSTRUCTION MANUAL

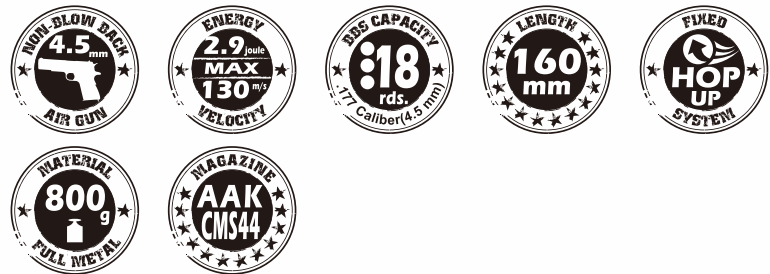

KWC KWIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

射擊前的準備 BEFORE SHOOTING



2. 取出彈匣
Release the magazine.

1. 推開卡榫
Push the button

 


3. 使用六角扳手
手反時針方向
取出彈匣
底內件。

Use hexagonal wrench to
remove the magazine cap by
counter clockwise.


4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。

Turn the magazine cap a out
counter-clockwise and place CO2
cartridge B inside the magazine.
Rapidly turn the screw A clockwise
when piercing the cartridge in the
magazine.

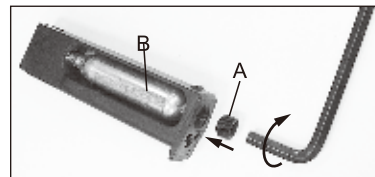

5. 拉下滑粒。
Pull the magazine follower down.

 6. 填裝B.B彈。
Loading BBs.
為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.

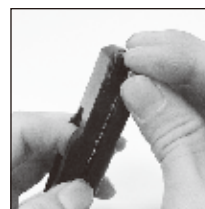

7. 最多可裝18粒。
Maximum BB capacity is 18 rounds.

射擊 SHOOTING

1. 將裝好B.B彈的彈匣插入槍身上推入，直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airgun until you hear the sound of
“CLICK”.

2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.

▲ 注意：在長期不使用的狀態下，請將彈匣內的氣體洩放掉。

▲ CAUTION: Release all of the gas in the magazine when it will not use in long-term period.



安全裝置 SAFETY



故障原因與排除 / BREAK DOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的 B.B彈。

Bad quality BB is the main reason to cause BB jam. Please use high quality BB avoid jamming problem.

2. 當卡彈時，請儘可能先取出彈匣，再以不傷槍管的軟質細棒（不可大於4.4mm直徑），從槍口置入清除。

When BB jamming, first please release the magazine from pistol then use a soft stick (diameter no bigger than 4.4mm) to clear up the barrel.

3. 空擊發易造成零件損耗，請避免此動作。

 
Please avoid dry firing, for it could cause parts deformed or damage.

4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。

Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.

5. 使用一段時間後，請再次用含矽油之潤滑油，潤滑撞針及扳機軸心。

Please spray lubricant(with silicone oil type) at firing pin and trigger pin after a certain of use, pictures shown.

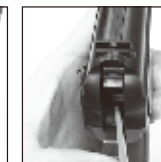

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

 
- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet, Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

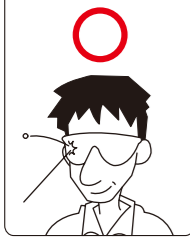

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

 ★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

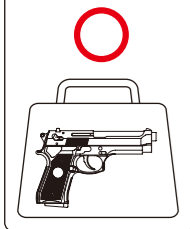

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.



 
★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.

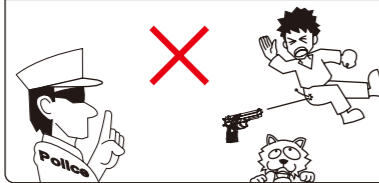


★請確認後再發射BB彈方向，附近無人或動物存在。

 ★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

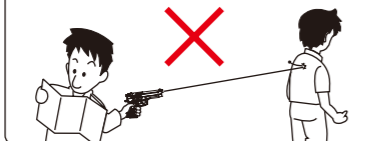

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

KCMD44 系列 零件表 KCMD44 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P09	保險配件	B04	扳機軸	SM2	槍管回位壓簧
P23	槍柄	B05	扳機連動件軸		
P26	彈匣底座配件	KM44-B06	心棒	EA004	內六角 M5-P0.8x8
UKG01-P31	心棒蓋迫緊	KCB75-B16	氣瓶頂針	EA020	⊕2.3x6尖.鍍.熱
P42	彈匣滑粒	UKG01-B19	心棒蓋	EA061	⊕Ⅲ 2.3x5束黑熱
P44	前槍管套	B41	槍管	EA064	⊕Ⅲ 2.3x6束黑熱
KM44-P45	槍管內套	KG47-F401	心棒壓簧墊圈	EA066	⊕Ⅲ 2.3x8束黑熱
		KG12-B215	氣瓶頂針迫緊	EA087	六角螺帽M5-0.8
Z01	本體(左)	EB004	槍管華司	ED008	E型扣環
Z02	本體(右)	KG47-F401	心棒壓簧墊圈	E08	內六角止付螺絲
Z03	扳機	F01	扳機連桿		
Z04	保險(左)	F02	擊槌軸	R01	子彈迫緊
Z05	撞針				
Z07	扳機連動件	S01	槍柄扣環	G001	O形環φ0.8xφ11.3id
Z10	保險固定件	S03	保險左壓簧	G005	O型環 1x4
Z11	彈匣卡榫	S05	撞針扭簧	G006	O型環 1x5
Z21	擊鐵	S07	扳機連桿扭簧	G013	O型環 1.45x6.9id
Z46	槍管連動件	S08	彈匣卡榫壓簧	G022	O形環 S-8
Z48	彈匣	S09	擊槌扭簧		
		S10	緩衝扭簧	U1	內槍管組件
B003	鋼珠	KG47-S404	心棒壓簧	U2	扳機組件
B03	撞針軸	KM47-S471	彈匣壓簧	U3	氣瓶頂針組件


零件有時為了改良而不經預告變更

KCMD44 系列 零件表 KCMD44 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P09	SAFETY ACCESSORY	B04	TRIGGER PIN	SM2	BARREL SPRING
P23	GRIP	B05	TRIGGER CONNECTOR PIN		
P26	MAGAZINE BASE ACCESSORY	KM44-B06	VALVE	EA004	SOCKET SCREW M5-P0.8x8
UKG01-P31	VALVE PACKING	KCB75-B16	PUNCTURE VAVLE	EA020	SCREW 2.3x6
P42	MAGAZINE FOLLOWER	UKG01-B19	VALVE CAP	EA061	SCREW 2.3x5
P44	FRONT BARREL CAP	B41	BARREL	EA064	SCREW 2.3x6
KM44-P45	INNER BARREL CAP	KG47-F401	VALVE SPRING GASKET	EA066	SCREW 2.3x8
		KG12-B215	PUNCTURE VAVLE PACKING	EA087	HAX NUT M5-0.8
Z01	FRAME (L)	EB004	BARREL WASHER	ED008	E-RING
Z02	FRAME (R)	KG47-F401	VALVE SPRING GASKET	E08	MAGAZINE BOTTOM CAP
Z03	TRIGGER	F01	TRIGGER BAR		
Z04	SAFETY (L)	F02	HAMMER AXIS	R01	RUBBER CHAMBER
Z05	FIRING PIN				
Z07	TRIGGER CONNECTOR	S01	GRIP BUCKLE	G001	O-RING φ 0.8x φ 11.3id
Z10	SAFETY LOCK	S03	SAFETY SPRING (L)	G005	O-RING 1x4
Z11	MAGAZINE CATCH	S05	FIRING PIN SPRING	G006	O-RING 1x5
Z21	HAMMER	S07	TRIGGER BAR SPRING	G013	O-RING 1.45x6.9id
Z46	BARREL TOW	S08	MAGAZINE CATCH SPRING	G022	O-RING S-8
Z48	MAGAZINE	S09	HAMMER SPRING		
		S10	PUMPER SPRING	U1	INNER BARREL UNIT
B003	BEARING	KG47-S404	VALVE SPRING	U2	TRIGGER UNIT
B03	FIRING PIN AXLE	KM47-S471	MAGAZINE SPRING	U3	PUNCTURE VAVLE UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

 KCMD44 系列 零件分解圖 KCMD44 SERIES EXPLODED VIEW

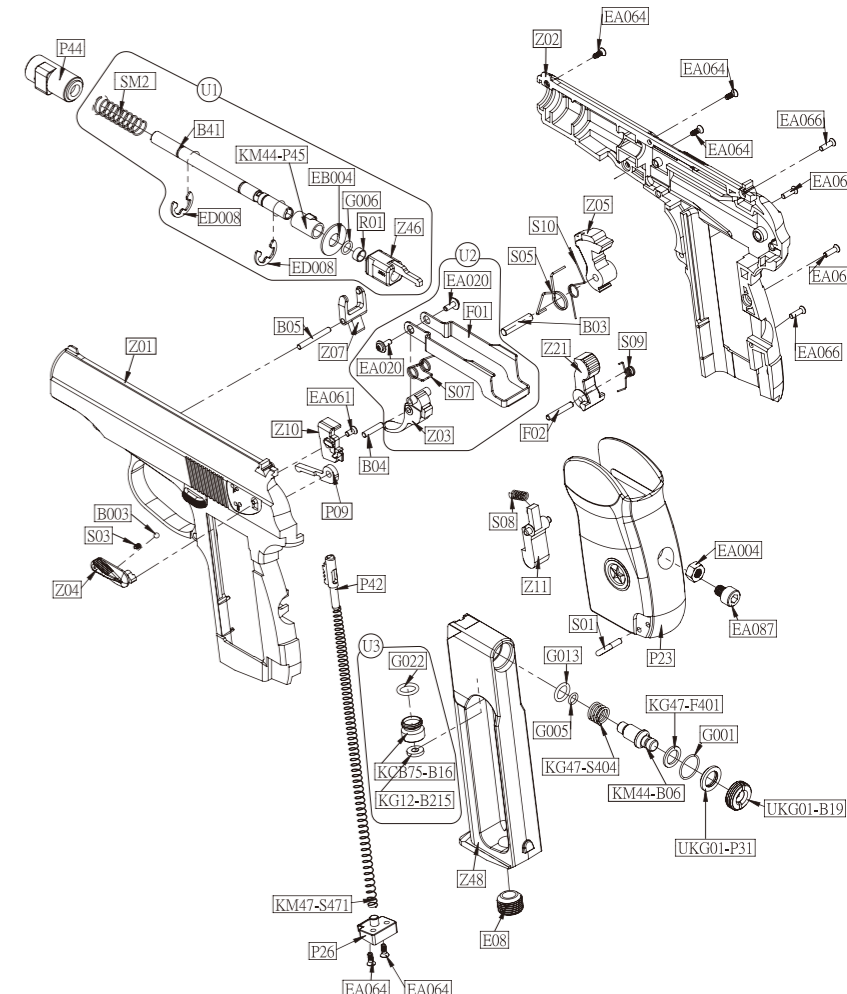

K08-00691-10 2023© 01