

2022



MODEL
AAKACZ470 OR AAKACZ471
INSTRUCTION MANUAL




KWC KEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST, TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

裝彈器的使用 / BB LOADER


1. 先下壓蓋子卡榫，再往外推出蓋子。
Press the button as arrow#1 and then push it to open as arrow#2.

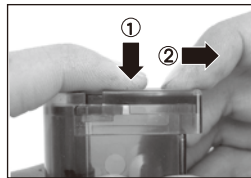


2. 置滿B.B彈於裝彈器內後，推入蓋子卡緊。
Load the BB inside and cover the case.



3. 彈匣上部置入裝彈器內。
Match the loader with magazine as picture.

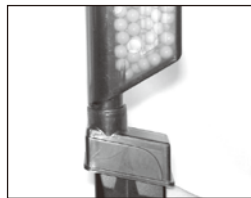

4. 拉伸導管至盡頭，搖入B.B彈。
Pull the lever and shake the case as picture.

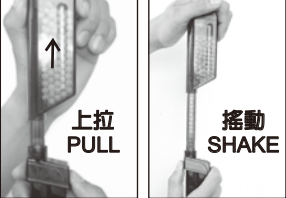

5. 裝彈器本體往下壓，擠入B.B彈於彈匣內。
Push the case as picture and BB will get into the magazine.



- 註: 1. 本裝彈器一次最多可置入彈匣內24發B.B彈。
2. 裝彈器頭罩可旋轉取下，互換不同商品。

- P.S: 1. The BB capacity in this magazine is 24 shots.
2. The front cap could be replaced and fit on the other KWC products.

- ⚠ 注意: 本裝彈器是雙排彈設計，故不良的B.B彈將是造成裝彈器損壞的原因。

- ⚠ CAUTION: This loader is double row design at the channel, bad quality BB might break it.

操作說明 / OPERATION


射擊前的準備 BEFORE SHOOTING



1. 按下卡榫
Press the button.
2. 取出彈匣
Release the magazine.



- 3-1. 使用裝彈器裝填B.B彈。
Use BB loader to load the BB.

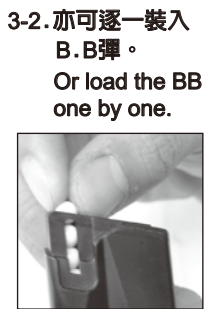

- 3-2. 亦可逐一裝入B.B彈。
Or load the BB one by one.

4. 插入彈匣(有“卡嗒”聲)，準備射擊。
Put the magazine inside until you hear “CLICK”.

安全裝置 SAFETY



射擊 SHOOTING

1. 上蓋必須往後拉到底後才釋放，方能借彈簧回復力使B.B彈上膛。

Make sure you had pulled the slide as picture until the end, BB will go into the chamber by spring.



2. 射擊。
Pull the trigger to shoot BB.

3. 請先釋放卡榫後，再扣發扳機射擊，以減低商品之故障。
Reload the BB and don't pull the trigger until you release the slide back. The gun might be damaged if you don't follow above steps.




下壓卡榫，釋放上蓋
Press the slide stopper to release the slide back(disengage Hold Open).

拆解 DISASSEMBLY

1. 取出彈匣(手扶彈匣，以避免掉落)。
Release the magazine (hold the magazine tight for preventing dropping).



2. 上蓋往後拉至缺口處，取出止動片。
Pull the slide until the breach in the side of slide. then take off the slide stopper.

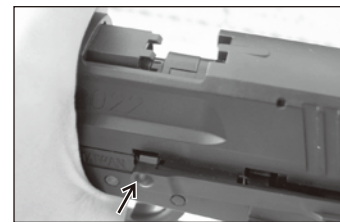

取出止動片 Take off slide stopper.

3. 上蓋往前推，即可分解上蓋和本體。
Push the slide then you could disassemble the slide and frame.



故障原因與排除 / BREAKDOWN FAQ

1. 卡彈的清除: 不良的B.B彈是造成卡彈的原因，上蓋若未回復至正確位置，可能的原因就是卡彈，請以細棒清除B.B彈。

BB JAM: bad quality BB is the main reason of BB jam. please use some narrow sticker to clear out the barrel. when slide did not return properly.

2. 如果連續拉動上蓋，即是連續進彈，所以請拉動上蓋一次，就做一次的射擊。

Pull slide once and the BB will get into chamber by one BB. always shoot the gun after pulling slide one time. or the BB will be stuck in the chamber.

3. 使用一段時間後，請再次潤滑(噴矽油脂)上蓋滑動處及氣缸與活塞滑動處。

Spray Silicon base lubricant on the parts as picture.





WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年的孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airsoft.
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

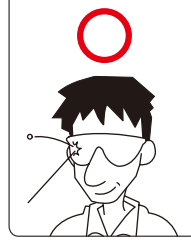

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。
★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

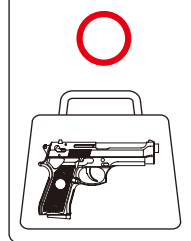


★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.




★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.

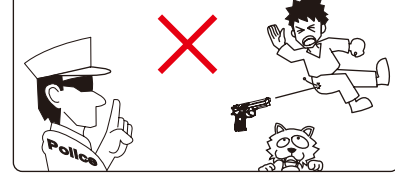

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

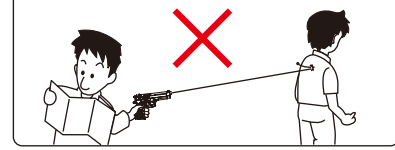

 ★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

AAKACZ47 系列 零件表 AAKACZ47 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱
P05	槍管接筒	Z703	活塞固定座
P09	活塞		
P10	彈簧支座	R01	活塞迫緊
P604	彈匣壓簧導桿	R03	子彈迫緊 (HOP-UP)
P608	氣缸後罩	B03H	槍管
P612	子彈卡榫	F701	軸A (本體用)
P613	彈匣滑粒	F702	彈簧銷 (導管用)
P614	活塞卡榫	F703	軸 (固定座用)
P618	彈匣底座卡榫	F705	平頭軸 (活塞卡榫用)
P619	子彈卡榫配件	F709	KA-01軸 (擊鐵箱)
P621	氣缸	F710	KA-13軸 (擊鐵)
P701	槍身本體		
P702	槍身上蓋	S601	彈匣壓簧
P703	槍柄	S602	子彈卡榫壓簧
P705	扳機	S603	活塞卡榫扭簧
P706	扳機連桿 (右)	S604	活塞壓簧
P707	彈匣卡榫	S610	導管配件壓簧
P709	導管配件	S611	底座卡榫壓簧
P710	彈匣底座	S705	槍管導管壓簧
P715	保險 (左)	S706	扳機扭簧
P716	上蓋止動片	S707	本體軸A扭簧
P717	擊鐵	S708	止動片扭簧
P722	彈匣卡榫配件	S709	彈匣卡榫壓簧
P723	扳機連桿 (左)	S710	擊鐵扭簧
P724	擊鐵卡榫	S711	扳機連桿壓簧
P725	銘板	S712	保險扭簧
P726	導桿		
P727	槍管套 (短)	E01	Φ2.3X8
		E02	企眼
Z604	彈匣內套 (左)	X1	內槍管組件
Z605	彈匣內套 (右)	X2	扳機連桿組件
Z701	擊鐵箱	X3	裝彈器組件
Z702	槍管導管		

零件有時為了改良而不經預告變更

AAKACZ47 系列 零件表 AAKACZ47 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT
P05	BARREL CONNECTOR	Z703	PISTON GUIDE
P09	PISTON		
P10	SPRING STOCK	R01	PISTON PACKING
P604	MAGAZINE SPRING GUIDE	R03	RUBBER CHAMBER
P608	CYLINDER REAR COVER	B03H	INNER BARREL
P612	AMMO CATCH	F701	PIN A (FRAME)
P613	MAGAZINE FOLLOWER	F702	SPRING PIN (OUTER BARREL)
P614	PISTON CATCH	F703	PIN (PISTON GUIDE)
P618	MAGAZINE BASE CATCH	F705	PIN (PISTON CATCH)
P619	AMMO CATCH ACCESSORY	F709	PIN (CHASSIS)
P621	CYLINDER	F710	PIN (HAMMER)
P701	FRAME		
P702	SLIDE	S601	MAGAZINE SPRING
P703	GRIP	S602	AMMO CATCH SPRING
P705	TRIGGER	S603	PISTON CATCH SPRING
P706	TRIGGER BAR (R)	S604	PISTON SPRING
P707	MAGAZINE CATCH	S610	OUTER BARREL ACCESSORY SPRING
P709	OUTER BARREL ACCESSORY	S611	MAGAZINE BASE CATCH SPRING
P710	MAGAZINE BASE	S705	OUTER BARREL SPRING
P715	SAFETY (L)	S706	TRIGGER SPRING
P716	SLIDE STOPPER	S707	PIN A (FRAME) SPRING
P717	HAMMER	S708	SLIDE STOPPER SPRING
P722	MAGAZINE CATCH ACCESSORY	S709	MAGAZINE CATCH SPRING
P723	TRIGGER BAR (L)	S710	HAMMER SPRING
P724	HAMMER CATCH	S711	TRIGGER BAR SPRING
P725	SYMBOL PLATE	S712	SAFETY SPRING
P726	RECOIL GUIDE		
P727	OUTER BARREL SLEEVE	E01	SCREW 2.3X8
		E02	EYE COUPLING
Z604	MAGAZINE WEIGHT (L)	X1	INNER BARREL UNIT
Z605	MAGAZINE WEIGHT (R)	X2	TRIGGER BAR UNIT
Z701	CHASSIS	X3	SPEED LOADER UNIT
Z702	OUTER BARREL		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

AAKACZ47 系列 零件分解圖 AAKACZ47 SERIES EXPLODED VIEW

