

17



CO2 Cartridge is not included
12g
MADE IN TAIWAN

AAKCMB19 系列說明書 AAKCMB19 INSTRUCTION MANUAL

KWTC KWIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明 OPERATION

1. 取出彈匣 RELEASE MAGAZINE



1. 按下卡榫
Press the button


2. 取出彈匣
Release the magazine

▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。

▲ CAUTION: Magazine directly falling on ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶的使用

INSTALLING 12G CO2 CARTRIDGE
逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

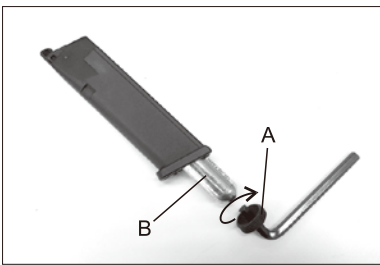


▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。

▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈

LOADING BBs

彈匣最多可裝17顆B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
BB's max capacity is 17 rounds. If you load more than this quantity, you would bring any abnormal problems.

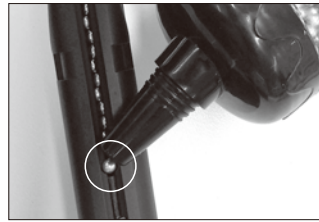

4. 彈匣上膛

INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身上推入, 直到彈匣卡榫發出"卡嗒"為止。
Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛

CHAMBERING THE BB

將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。

▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換 SWITCH SAFETY



▲ 注意: 上蓋滑動時, 注意縫隙夾到手指
▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.


故障/BREAK DOWN



▲ 注意: B.B彈用完時, 上蓋會後定卡住。
▲ CAUTION: hold open function as real pistol.

拆解/DISASSEMBLY

1. 按下卡榫, 取出彈匣
Press the magazine catch to release the magazine.

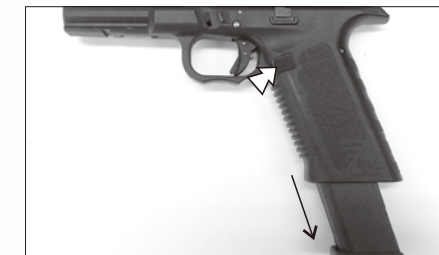

2. 上蓋滑套上膛
Pull the slide back.




3. 上蓋定位件往下按下
Press down the slide catch.



4. 往左滑出槍管, 本體和上蓋就可分離。
slide outer barrel to the left side to separate frame and slide



5. HOP UP 調整
adjust HOP UP system.

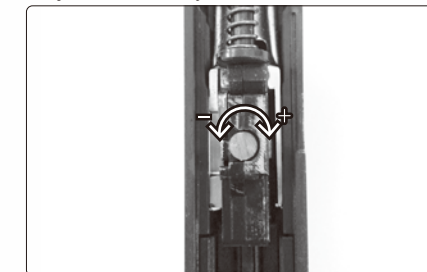

故障的原因與排除 BREAK DOWN FAQ

* 卡彈可能原因:
Possible reasons for BB jam:

- 裝彈排列不整齊
BB dose not stack properly.
- 不良B.B彈
bad quality BB
- 空擊發易造成零件損耗, 請避免此動作。
please avoid dry firing as it could cause parts deformed or damage.





排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BB out from barrel.



保養及維護 MAINTENANCE GUIDE

當射擊約2000發時, 建議你如圖所示, 以砂油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。
After every 2,000 BB shots, lubricate slide and frame track, hammer and firing pin is recommended. Please see picture below for suggested lubricate area.

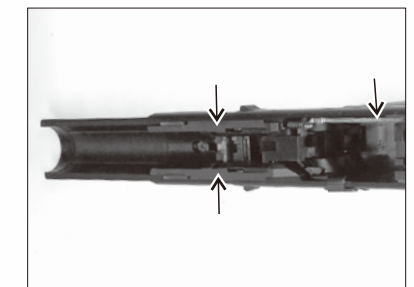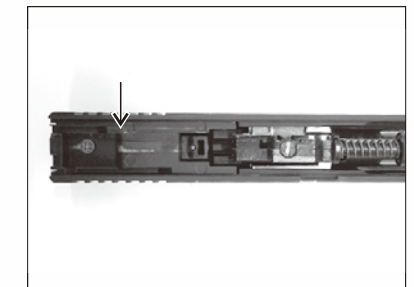

WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年的孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airgun.

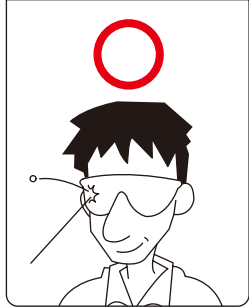

★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★Always transport an airgun in a locked carrying case. Make sure it is unloaded and on safe.

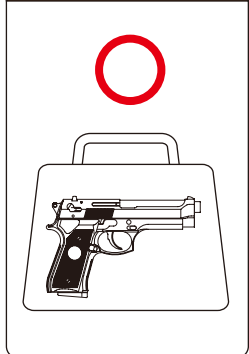


★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airgun.

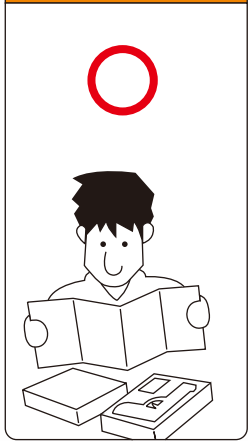


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airgun at any people or domestic animals. Brandish this airgun in public is dangerous and may be a crime.

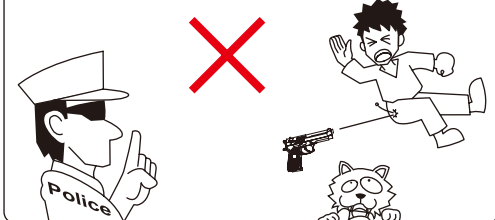

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

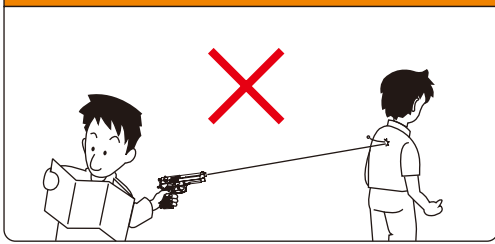

 ★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airgun may cause malfunction, void your warranty and may make it unsafe to use.




Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCMB19 系列 零件表 AAKCMB19 SERIES PARTS LIST

AAKCMB19 系列 零件分解圖 AAKCMB19 SERIES EXPLODED VIEW

| NO. | 零件名稱 | UNIT | NO. | 零件名稱 | UNIT | NO. | 零件名稱 | UNIT |
|------------|----------|----------------------------|------|---------------|-------------------------------|-----------|-------------|------------------------------|
| P03 | 扳機配件 | TRIGGER ACCESSORY | Z31 | 氣缸 | CYLINDER | KCB23-L30 | 心棒 | VALVE |
| P04 | 前準星 | FRONT SIGHT | Z43 | 彈匣滑粒 | MAGAZINE FOLLOWER | KCB23-L31 | 心棒後部 | VALVE REAR |
| P05 | 後準星 | REAR SIGHT | | | | KCB23-B26 | 氣瓶頂針 | PUNCTURE VAVLE |
| P08 | 滑套射嘴 | LOADING NOZZLE | R01 | 子彈迫緊 | RUBBER CHAMBER | KG12-B215 | 氣瓶頂針迫緊 | PUNCTURE VAVLE PACKING |
| P11 | 彈匣卡榫 | MAGAZINE CATCH | R02 | 氣嘴迫緊 | GAS ROUTE PACKING | | | |
| P13 | 彈匣上部 | MAGAZINE RIB | | | | S01 | 擊鐵扭簧 | HAMMER SPRING |
| P18 | 上蓋緩衝件 | SLIDE BUFFER | G002 | O形環 1X2id | O-RING 1X2id | S03 | 撞針拉簧 | FIRING PIN SPRING |
| P19 | 內槍管配件 | INNER BARREL ACCESSORY | G008 | O形環 1X6 | O-RING 1X6 | S04 | 撞針卡榫壓簧 | FIRING PIN CATCH SPRING |
| P20 | 彈匣底座配件 | MAGAZINE BASE ACCESSORY | G016 | O形環 PU S-4(黃) | O-RING PU S-4 | S05 | 滑套射嘴回位壓簧 | LOADING NOZZLE RECOIL SPRING |
| P28 | 槍管定位件(左) | BARREL LOCATOR (L) | G034 | O型環 P-9 | O-RING P-9 | S06 | 氣流控制件壓簧 | FLOATING VALVE SPRING |
| P31 | 本體 | FRAME | G038 | O形環 2X13 | O-RING 2X13 | S07 | 回位導桿壓簧 | RECOIL BAR SPRING |
| P33 | 氣流控制件 | FLOATING VALVE | | | | S08 | 回位導桿緩衝壓簧 | RECOIL BAR BUFFER SPRING |
| P34 | 槍管定位件(右) | BARREL LOCATOR (R) | F01 | 上蓋止動片 | SLIDE STOPPER | S10 | 彈匣壓簧 | MAGAZINE SPRING |
| KMB07-P41 | 心棒迫緊 | VALVE PACKING | F02 | 上蓋卡榫彈片 | SLIDE CATCH SPRING PLATE | S11 | 彈匣卡榫壓簧 | MAGAZINE CATCH SPRING |
| KCCB46-P18 | 回位導桿外桿 | RECOIL BAR OUTER SLEEVE | L03 | 子彈迫緊調整螺絲 | HOP UP ADJUST SCREW | S12 | 保險壓簧 | SAFETY SPRING |
| KCCB46-P19 | 回位導桿前配件 | RECOIL BAR FRONT ACCESSORY | L04 | 滑套射嘴軸 | LOADING NOZZLE PIN | S13 | 扳機連桿拉簧 | TRIGGER BAR SPRING |
| A29 | 上蓋 | SLIDE | L05 | 上蓋卡榫彈片軸 | SLIDE CATCH SPRING PLATE AXLE | S16 | 上蓋止動片扭簧 | SLIDE STOPPER SPRING |
| A30 | 槍管導管 | OUTER BARREL | L06 | 擊鐵軸 | HAMMER PIN | S18 | 心棒壓簧 | VALVE SPRING |
| Z06 | 槍身內套 | INNER FRAME BASE | L07 | 擊鐵卡榫軸套 | HAMMER CATCH PIN SLEEVE | S19 | 扳機扭簧 | TRIGGER SPRING |
| Z07 | 扳機定位件 | TRIGGER LOCATOR | L08 | 撞針軸 | FIRING PIN AXLE | S30 | 子彈迫緊調整壓簧 | HOP UP ADJUST SPRING |
| Z08 | 上蓋定位件 | SLIDE LOCATOR | L11 | 連發卡榫軸 | FULL AUTO CATCH PIN | EA010 | ⊕M2X4尖附華司螺絲 | SCREW M2X4 |
| Z09 | 撞針卡榫 | FIRING PIN CATCH | L13 | 扳機配件軸 | TRIGGER ACCESSORY PIN | EA045 | ⊕M3.0X8 | SCREW M3.0X8 |
| Z10 | 擊鐵 | HAMMER | L14 | 上蓋止動片軸套 | SLIDE STOPPER PIN SLEEVE | EA061 | ⊕ 2.3X5 | SCREW 2.3X5 |
| Z11 | 擊鐵卡榫 | HAMMER CATCH | L15 | 扳機軸 | TRIGGER PIN | EA066 | ⊕ 2.3XL8 | SCREW 2.3XL8 |
| Z12 | 撞針 | FIRING PIN | L16 | 扳機定位件軸 | TRIGGER LOCATOR PIN | EA071 | ⊕ 2.6X8 尖黑 | SCREW 2.6X8 |
| Z13 | 擊鐵箱 | CHASSIS | L17 | 擊鐵卡榫軸 | HAMMER CATCH PIN | EA077 | ⊕ 3X10 | SCREW M3X10 |
| Z15 | 槍管蓋(右) | INNER BARREL CASE (R) | L26 | 射嘴回位壓簧導軸 | NOZZLE RECOIL SPRING PIN | EA122 | 六角螺帽M3X2.3 | HAX NUT M3X2.3 |
| Z17 | 槍管蓋(左) | INNER BARREL CASE (L) | L27 | 彈匣上部固定軸 | MAGAZINE RIB FIX PIN | EB002 | KA-01彈簧墊圈 | SPRING WASHER |
| Z19 | 子彈迫緊調整片 | HOP-UP ADJUST PLATE | L29 | 擊鐵扭簧定位套 | HAMMER SPRING LOCATOR | | | |
| Z22 | 扳機連桿 | TRIGGER BAR | L32 | 氣閥本體 | VALVE FRAME | X1 | 內槍管組件 | INNER BARREL UNIT |
| Z27 | 保險 | SAFETY | L36 | 內槍管 | INNER BARREL | X2 | 氣缸組件 | CYLINDER UNIT |
| Z28 | 鋼瓶鎖緊件 | MAGAZINE BOTTOM CAP | L44 | 回位導桿 | RECOIL BAR | U1 | 滑套射嘴組件 | LOADING NOZZLE UNIT |
| Z30 | 扳機 | TRIGGER | L45 | 回位導桿螺絲 | RECOIL BAR SCREW | U2 | 氣閥組件 | VALVE UNIT |
| | | | L47 | 保險軸 | SAFETY PIN | U3 | 氣瓶頂針組件 | PUNCTURE VAVLE UNIT |
| | | | L49 | 氣缸迫緊配件 | CYLINDER PACKING ACCESSORY | | | |

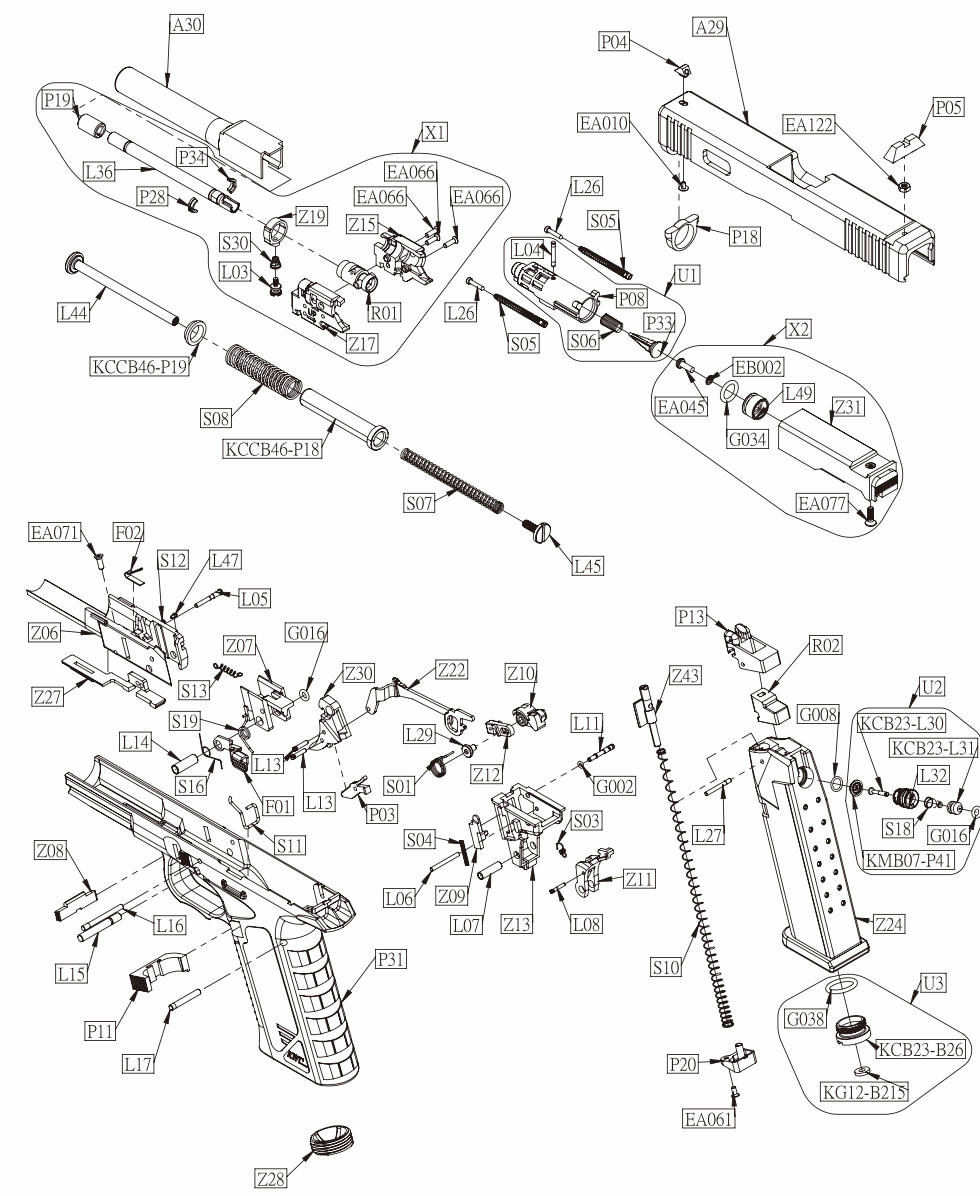

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.