

POB

TOGGLE LOCK BLOWBACK

BLOWBACK * 4.5mm (0.177")
STEEL
BBS
AIR GUN
POWER



CO2 Cartridge is not included
12g
MADE IN TAIWAN

AAKCMB41 系列說明書 AAKCMB41 INSTRUCTION MANUAL

KWC KIWEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明 OPERATION

1. 取出彈匣 RELEASE MAGAZINE




- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。


Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

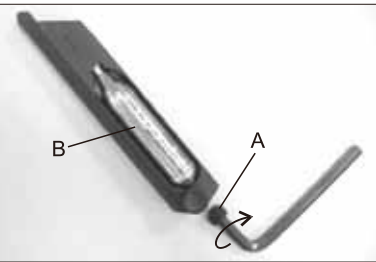

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBS

彈匣最多可裝21顆B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。(分2種方式裝彈)
BB's max capacity is 21 rounds. If you load more than this quantity, you would bring any abnormal problems. (BB can be loaded in two ways.)

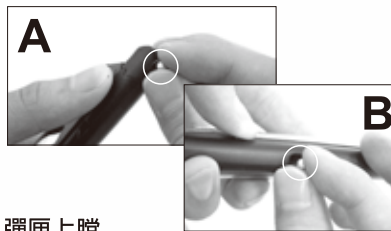

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身上推入, 直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB

將肘節式閉鎖往後拉到底, 放開則會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulled the toggle assembly to the end. BB will be loaded and ready to shoot after recoil of toggle assembly.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換 SWITCH SAFETY



- ▲ 注意: 保險只有在槍上膛才可切換。
- ▲ CAUTION: safety can only re swiched when pistol is cocked

7. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger. Then the BB will be shot.




- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: hold open function as real pistol.

拆解/DIS-ASSEMBLY


1. 先扳下上蓋卡榫。 push down the slide catch



2. 定位後再把上蓋卡榫往外抽出一些, 以便取出扳機蓋。 in fixed position, pull the slide catch out slightly in order to remove trigger cover

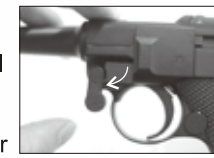


3. 往上取出扳機蓋。 take out the trigger cover from the top

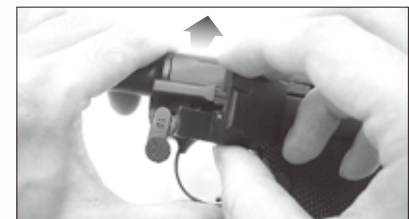


4. 退下彈匣。 release the magazine

5. 往左滑出槍管, 本體和上蓋就可分離。 slide outer barrel to the left side to separate frame and slide

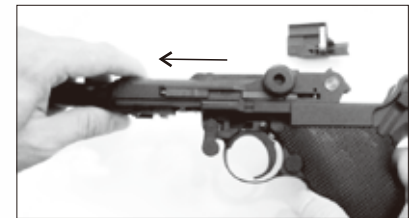

故障的原因與排除 BREAK DOWN FAQ

- * 卡彈可能原因:
the reason for BB jam :
- a. 裝彈排列不整齊
the BB in the magazine does not arrange very well.
- b. 不良B.B彈
bad quality BB
- c. 空擊發易造成零件損耗, 請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

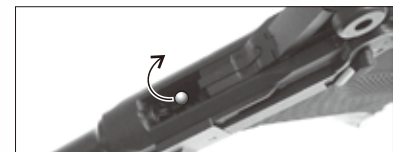




- A: 排除: 將上蓋往後拉, 向下倒出即可。
Overcome: pull the slide back and pour the BB out from slide.
- Q: 無裝彈時會有空倉掛鎖的狀態, 肘節式閉鎖會固定無法回位。
Toggle assembly will be locked when out of BB



- A: 排除: 將彈匣退出或裝上B.B彈上膛, 再拉一下就可使肘節式閉鎖回位。
Overcome: A. loading BB in the magazine B. release the magazine, then pull back the toggle lock.

保養及維護 MAINTENANCE GUIDE

當射擊約2000發時, 建議你如圖所示, 以矽油脂適量在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。
After every 2,000 BB shots, lubricating the Firing pin and Track as pictures below is recommended.

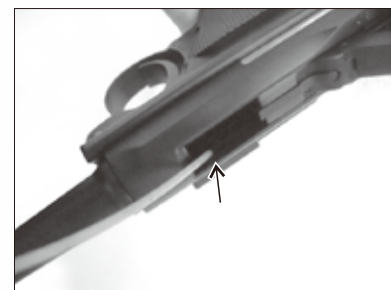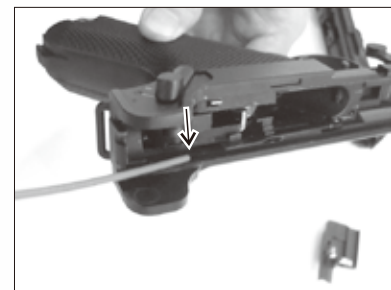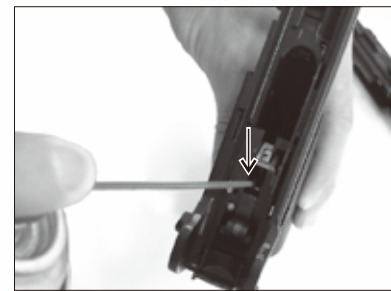

WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成io童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

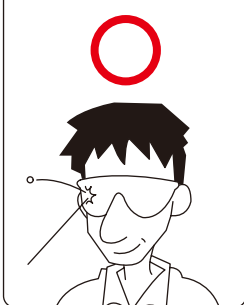

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

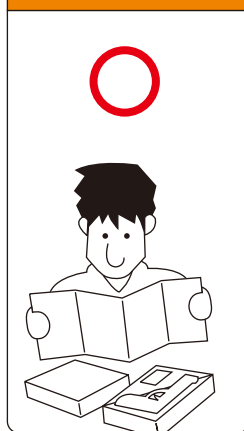


★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。

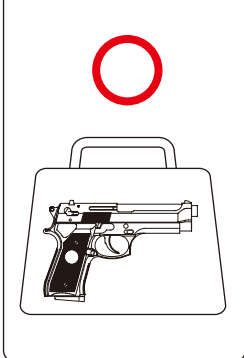


★請不要由槍口向內探視。




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

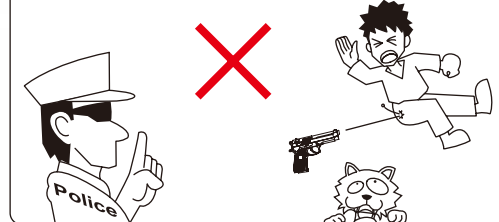

★請確認後再發射BB彈方向，附近無人或動物存在。

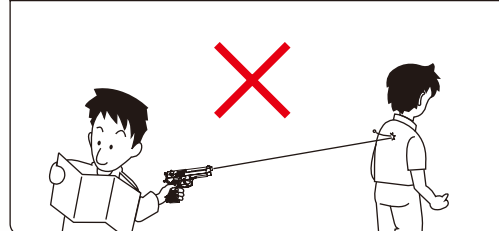

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

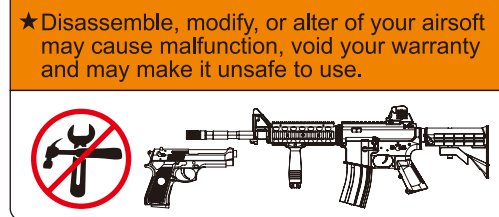


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCMB41 系列 零件表 AAKCMB41 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P01	滑套射嘴	LOADING NOZZLE	G015	O形環 PU S-4(黃)	O-RING PU S-4	B31	擊鐵撞擊軸	HAMMER FIRING PIN
P04	槍柄(左)	GRIP (L)	G022	O形環 S-8	O-RING S-8	B32	撞針卡榫螺絲	FIRING PIN CATCH SCREW
P05	槍柄(右)	GRIP (R)	G024	O型環 S10	O-RING S10	B33	氣缸螺絲	CYLINDER SCREW
P06	擊鐵壓簧配件	HAMMER SPRING ACCESSORY				B34	槍管套	OUTER BARREL CAP
P08	彈匣底座配件	MAGAZINE BASE JOINT	F01	撞針卡榫	FIRING PIN CATCH	KG12-B215	氣瓶頂針組件	PUNCTURE VAVLE PACKING
P09	氣流控制件	FLOATING VALVE	F02	撞針	FIRING PIN			
P10	槍管固定件	BARREL HOLD	F03	擊鐵壓簧導桿	HAMMER SPRING BAR	S01	擊鐵卡榫運動件扭簧	HAMMER CATCH CONNECTOR SPRING
P13	彈匣上部	MAGAZINE RIB	F04	上蓋止動片	SLIDE STOPPER	S02	槍機座回位扭簧	BOLT CARRIER RECOIL SPRING
KMB07-P41	心棒迫緊	VALVE PACKING	F05	上蓋右側飾片	SLIDE ACCESSORY (R)	S03	撞針配件扭簧	FIRING PIN ACCESSORY SPRING
			F06	彈匣彈片	MAGAZINE PLATE	S04	撞針回位扭簧	FIRING PIN RECOIL SPRING
			F07	射嘴固定片	LOADING NOZZLE HOLD	S05	撞針卡榫扭簧	FIRING PIN CATCH SPRING
Z01	本體	FRAME				S06	上蓋卡榫定位軸壓簧	SLIDE CATCH LOCATOR PIN SPRING
Z03	外槍管	OUTER BARREL	B01	滑套射嘴後部	REAR LOADING NOZZLE	S07	擊鐵釋放連桿軸壓簧	HAMMER RELEASE BAR PIN SPRING
Z04	上蓋	SLIDE	B03	擊鐵釋放連桿軸	HAMMER RELEASE BAR PIN	SM8	擊鐵壓簧	HAMMER SPRING
Z05	擊鐵箱	CHASSIS	B04	擊鐵配件	HAMMER ACCESSORY	S10	扳機壓簧	TRIGGER SPRING
Z06	保險運動件	SAFETY CONNECTOR	B05	氣閥本體	VALVE FRAME	S11	射嘴回位拉簧	LOADING NOZZLE RECOIL SPRING
Z07	保險	SAFETY	B06	心棒後部	VALVE BACK	S12	心棒壓簧	VALVE SPRING
Z08	擊鐵卡榫	HAMMER CATCH	B07	心棒	VALVE	S13	擊鐵卡榫壓簧	HAMMER CATCH SPRING
Z09	槍機座	BOLT CARRIER	B08	槍柄螺絲	GRIP SCREW	S14	槍管壓簧	BARREL SPRING
Z10	槍機座拉桿	BOLT CARRIER RECOIL BAR	B09	內槍管(4.38)	INNER BARREL	SM15	氣流控制件壓簧	FLOATING VALVE SPRING
Z11	氣缸	CYLINDER	KMB41-B08	彈匣彈片螺絲	MAGAZINE PLATE SCREW	S16	上蓋卡榫扭簧	SLIDE CATCH SPRING
Z12	槍管接筒(左)	BARREL CONNECTOR(L)	B10	槍機座軸	BOLT CARRIER PIN	S17	槍管緩衝壓簧	BARREL BUFFER SPRING
Z13	槍管接筒(右)	BARREL CONNECTOR(R)	B11	槍機座軸套(大)	BOLT CARRIER SLEEVE #11	SM9	彈匣壓簧	MAGAZINE SPRING
Z14	上蓋卡榫	SLIDE CATCH	B12	槍機座連接軸	BOLT CARRIER CONNECTOR PIN			
Z15	扳機蓋	SLIDE COVER	B13	槍機座拉桿軸	BOLT CARRIER RECOIL BAR PIN	EA038	圓頭十字螺絲M2.6XP0.45X15L	SCREW M2.6XP0.45
Z16	扳機運動件	TRIGGER CONNECTOR	B14	氣缸配件軸	CYLINDER ACCESSORY PIN	EA102	止付螺絲M2.6XP0.45X5L	SET SCREW M2.6XP0.45
Z17	扳機	TRIGGER	B15	擊鐵卡榫運動件軸	HAMMER CATCH CONNECTOR PIN	KCB76-E08	內六角止付螺絲M12XP1.0X8L	SCREW M12XP1.0
Z18	扳機運動件定位件	TRIGGER CONNECTOR LOCATOR	B16	擊鐵卡榫運動件彈片軸	HAMMER CATCH CONNECTOR PLATE PIN	EA061	圓頭十字螺絲M2XP0.4X5L	SCREW M2XP0.4
Z19	擊鐵卡榫運動件	HAMMER CATCH CONNECTOR	B17	氣瓶頂針M10	PUNCTURE VAVLE	EA012	圓頭十字螺絲M2XP0.4X5L	SCREW M2XP0.4
Z20	擊鐵釋放連桿	HAMMER RELEASE BAR	B18	上蓋右側飾片軸	SLIDE ACCESSORY (R) PIN	EA062	圓頭十字螺絲2.3-P0.4X5	SCREW 2.3-P0.4
Z21	氣缸配件	CYLINDER ACCESSORY	B19	擊鐵配件軸	HAMMER ACCESSORY PIN	EC004	彈簧銷	SPRING PIN
Z22	彈匣卡榫	MAGAZINE CATCH	B20	擊鐵箱軸	CHASSIS PIN	EA064	圓頭十字螺絲2.3X6束黑熱	SCREW 2.3X6
Z23	擊鐵	HAMMER	B21	扳機軸	TRIGGER PIN			
Z24	撞針配件	FIRING PIN ACCESSORY	B22	上蓋卡榫定位軸	SLIDE CATCH LOCATOR PIN	U1	氣瓶頂針組件	PUNCTURE VAVLE UNIT
Z26	本體配件	FRAME ACCESSORY	B23	槍機座軸套(小)	BOLT CARRIER SLEEVE #23	U2	氣閥組件	VALVE UNIT
Z27	彈匣滑粒	MAGAZINE FOLLOWER	B24	射嘴後部定位軸	REAR LOADING NOZZLE LOCATOR PIN	U3	氣缸組件	CYLINDER UNIT
Z28	槍管定位件(右)	BARREL LOCATOR (R)	B25	滑套射嘴回位拉簧軸	LOADING NOZZLE RECOIL SPRING PIN	U4	擊鐵箱組件	CHASSIS UNIT
Z29	槍管定位件(左)	BARREL LOCATOR (L)	B26	彈匣上部軸	MAGAZINE RIB PIN	U5	擊鐵組件	HAMMER UNIT
R03	子彈迫緊(4.38)	RUBBER CHAMBER	B27	撞針軸	FIRING PIN AXLE	X1	內槍管組件	INNER BARREL UNIT
R04	氣嘴迫緊	GAS ROUTE PACKING	B28	擊鐵軸	HAMMER PIN			
G002	O型環 1X2	O-RING 1X2	B29	撞針配件軸	FIRING PIN ACCESSORY PIN			
G008	O型環 1X6	O-RING 1X6	B30	擊鐵釋放連桿定位軸	HAMMER RELEASE BAR LOCATOR PIN			

AAKCMB41 系列 零件分解圖 AAKCMB41 SERIES EXPLODED VIEW

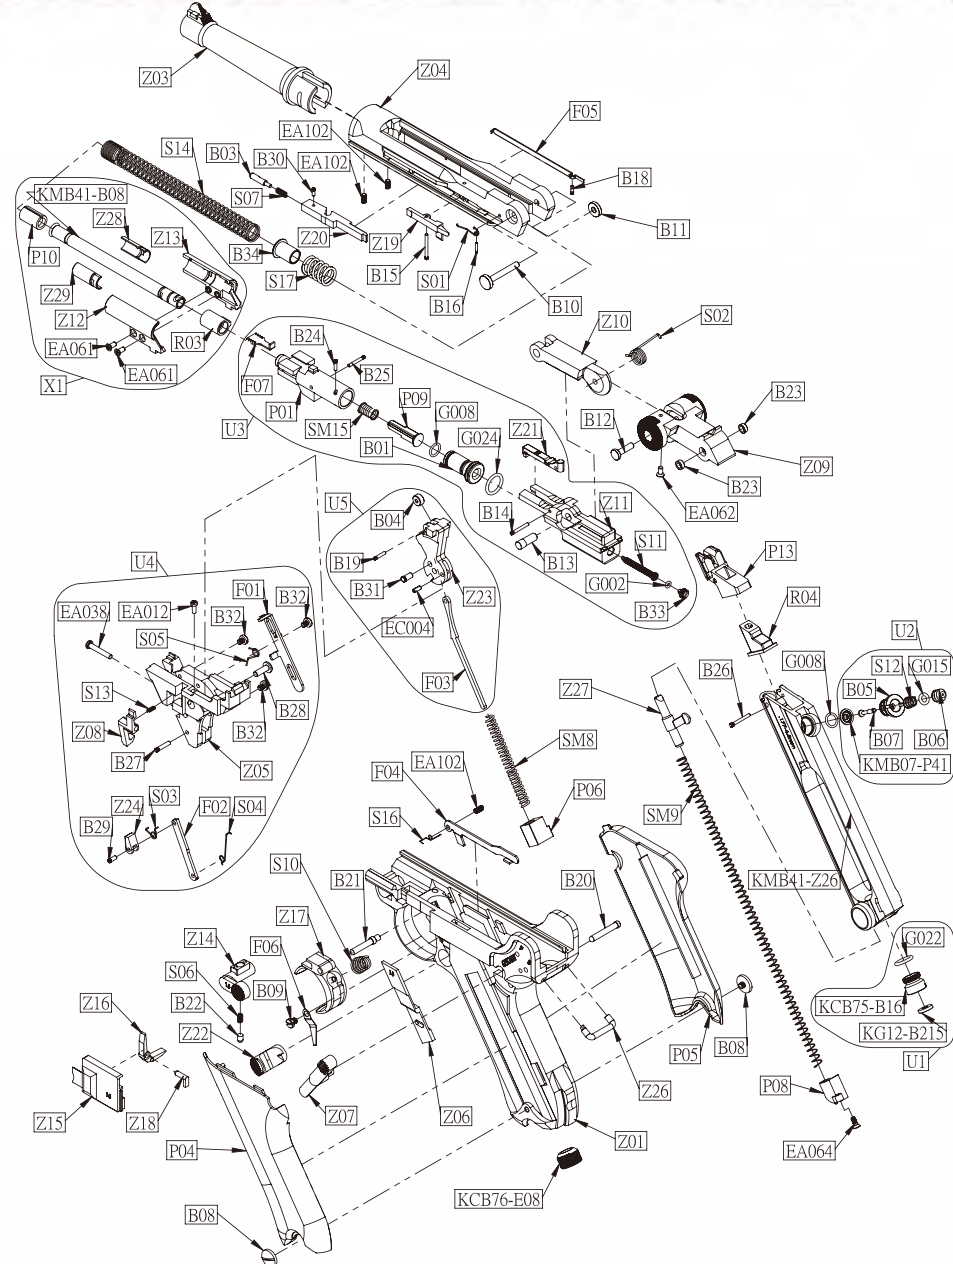

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.