

# P★M

BLOWBACK ★ 4.5mm (0.177")  
STEEL BBs  
AIR GUN  
POWER



CO2 Cartridge is not included  
12g  
MADE IN TAIWAN

## AAKCMB44 系列說明書 AAKCMB44 INSTRUCTION MANUAL

**KWT** KWIEN WELL TOY INDUSTRIAL CO., LTD  
www.kwcgun.com

台南市仁德區義林路168巷89號  
NO.89, LN. 168, YILIN RD.,  
RENDE DIST., TAINAN CITY  
71752, TAIWAN (R.O.C.)  
TEL : +886-6-2798175  
FAX : +886-6-2798176  
sales@kwcgun.com  
www.kwcgun.com



## 操作/OPERATION

### 操作說明

#### OPERATION

1. 取出彈匣  
RELEASE MAGAZINE




▲注意：請勿使彈匣直接掉落地面，以防止變形或損壞。

▲CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用  
INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。  
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

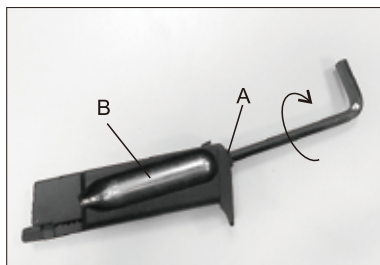

▲注意：為維護彈匣使用壽命，請盡可能不要殘留CO2氣體於彈匣內。

▲CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝BB彈  
LOADING BBs

為了使擊發順暢，填裝方法是讓B. B彈在彈匣中一粒接著一粒。  
For smooth shooting, Load BBs one by one.

▲注意：彈匣最多可裝15發B. B彈，如強行裝入更多，可能造成不當損壞及無法上膛，請注意。

▲CAUTION: Magazine max capacity is 15 rounds. Loading more than this quantity could bring malfunctions.

4. 彈匣上膛  
INSERTING THE MAGAZINE

將裝好BB彈的彈匣插入槍身往上推入，直到彈匣卡筴發出"卡嗒"為止。  
Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B. B彈上膛  
CHAMBERING THE BB

將上蓋往後拉到到底，放開上蓋則上蓋會自動回位，同時亦將B. B彈送上膛完成射擊準備。  
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



▲注意：拉動上蓋時，請勿將手指扣住扳機，以免發生不當射擊，造成危險。

▲CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換  
SWITCH SAFETY



▲注意：必須在上膛狀態下保險才可關閉  
▲CAUTION: Safety can only be turned on when this airsoft is cocked.



▲注意：上蓋滑動時，注意縫隙夾到手指  
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. 射擊  
SHOOTING

對準目標區後扣下扳機，則B. B彈將被射擊出去。  
Aim the target and pull the trigger. Then the BB will be shot.



▲注意：B. B彈用完時，上蓋會後定卡住。  
▲CAUTION: hold open function as real pistol.

### 拆解/DIS-ASSEMBLY

1. 拆解前退下彈匣  
Remove the magazine before disassemble.  
2. 先將護弓往下拉開  
Pull down the trigger guard.



3. 固定住護弓後再向後推出滑蓋，再往上拉起上蓋即可拆解分離  
Hold the trigger guard and pull back the slide. To remove slide, simply pull up the slide.



4. 上蓋拆解分離完成  
Slide disassembly done.



▲注意：裝入導管壓簧時，裝入方向如圖所示。  
▲CAUTION: When inserting the outer barrel spring, mind the direction as shown above.

## 故障/BREAK DOWN

### 故障的原因與排除

#### BREAK DOWN FAQ

- \* 卡彈可能原因：  
the reason for BB jam :
- a. 裝彈排列不整齊  
the BB in the magazine does not arrange very well.
  - b. 不良B. B彈  
bad quality BB
  - c. 空擊發易造成零件損耗，請避免此動作。  
Please avoid dry firing, for it could cause parts deformed or damage.



\* 排除：將上蓋往後拉，向下倒出即可。  
Solution: pull the slide back and pour the BB out from slide.






\* 射擊過程中偶而會發生，在作動時上蓋突然停止無法作動，而擊鐵回到原位，彈匣中仍有足夠瓦斯和BB彈。  
During the shooting process, sometimes the Slide and the Hammer stop unexpectedly.



\* 排除：此時並非故障，只需重新上膛便可繼續使用。  
Solution: This is not a failure. Just reload and operate again.

#### \* 保養及維護 MAINTENANCE GUIDE

當射擊約2000發時，建議你如圖所示，以砂油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑，以利滑動。  
After every 2,000 BB shots, lubricating the Firing pin and Track as pictures below is recommended.

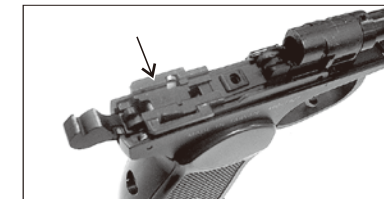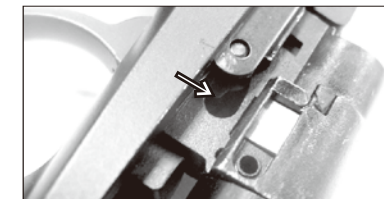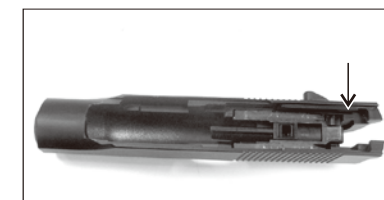



# WARNING 警告

## 請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


**This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.**

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。  
★Always wear eye protection when using airsoft.

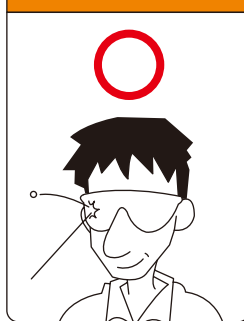

★使用低動能遊戲用槍前，請務必詳讀說明書內容。  
★Read the owner's manual before using the airsoft.

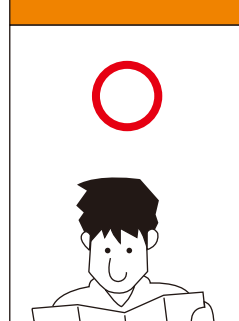

★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。  
★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.

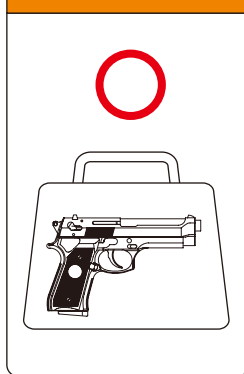


★請不要由槍口向內探視。  
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。  
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.



★請確認後再發射BB彈方向，附近無人或動物存在。  
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

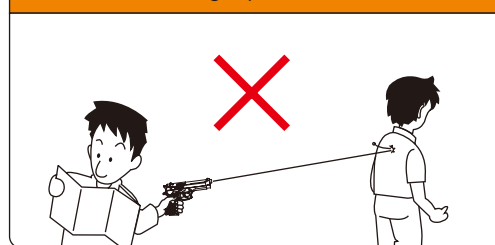

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。  
★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.

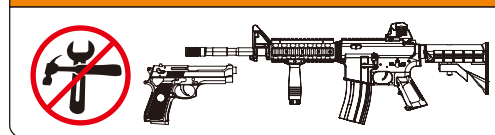

Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

## 操作/OPERATION


## AAKCMB44 系列 零件表 AAKCMB44 SERIES PARTS LIST

N.O.	零件名稱	UNIT
P07	彈匣底座配件	MAGAZINE BASE JOINT
P23	槍柄	GRIP
P33	滑套射嘴	LOADING NOZZLE
P34	氣流控制件	FLOATING VALVE
P35	彈匣上部	MAGAZINE RIB
P41	心棒迫緊	VALVE PACKING
A02	上蓋	SLIDE
Z01	本體	FRAME
Z03	扳機	TRIGGER
Z04	擊鐵卡榫	SEAR
Z05	撞針卡榫	FIRING PIN CATCH
Z06	保險左	SAFETY L
Z07	擊鐵箱右蓋	CHASSIS R
Z09	擊鐵	HAMMER
Z11	護弓	TRIGGER GUARD
Z12	彈匣卡榫	MAGAZINE CATCH
Z20	氣缸	BREECH
Z24	撞針	FIRING PIN
Z25	擊鐵箱左蓋	CHASSIS L
Z26	擊鐵箱中蓋	HAMMER CASE MIDDLE CATCH
Z36	彈匣滑粒	MAGAZINE FOLLOWER
Z38	槍管右蓋	BARREL TOW R
Z39	槍管左蓋	BARREL TOW L
Z48	彈匣本體	MAGAZINE FRAME
F01	擊鐵導桿	HAMMER GUIDE
F02	扳機連桿	TRIGGER BAR
F03	上蓋止動片	SLIDE STOP
R01	氣嘴迫緊	GAS ROUTE PACKING

N.O.	零件名稱	UNIT
R03	子彈迫緊Hop-up	RUBBER CHAMBER Hop-up
R05	O形環 S-8 (NBR)	O-RING S-8
R06	O形環 S-4 (PU90)	O-RING S-4
R07	O形環 1x61d (NBR)	O-RING 1X61d
R08	O形環 P-9 (PU90)	O-RING P-9
B01	心棒	VALVE
B03	護弓軸	TRIGGER GUARD PIN
B04	扳機連桿軸	TRIGGER BAR PIN
B05	彈匣上部軸	MAGAZINE RIB PIN
B07	氣閥本體	VALVE FRAME
B08	心棒後部	VALVE GATE
B12	護弓壓件	TRIGGER GUARD PRESS UNIT
B13	扳機軸	TRIGGER AXIS
B14	彈匣卡榫軸	MAGAZINE CATCH PIN
B15	導管固定軸A	BARREL PIN A
B16	擊鐵軸套	HAMMER SLEEVE
B18	導管固定軸B	BARREL PIN B
B19	擊鐵箱軸	CHASSIS PIN
B20	擊鐵軸	HAMMER AXIS
B21	止動片固定軸	SLIDE STOP PIN
B22	連桿扭簧固定軸套	LEVER SPRING SLEEVE
B23	活塞	PISTON
B24	擊鐵導桿軸	HAMMER GUIDE PIN
B26	擊鐵卡榫套	HAMMER CATCH SLEEVE
B27	射嘴壓簧導軸	NOZZLE SPRING GUIDE
B28	氣瓶頂針迫緊	CO2 INNER VALVE PACKING
B30	內槍管	INNER BARREL
B31	氣瓶頂針	INNER VALVE
B34	外槍管	OUTER BARREL

N.O.	零件名稱	UNIT
S01	擊鐵壓簧	HAMMER SPRING
S02	撞針扭簧	FIRING PIN SPRING
S03	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
S04	撞針卡榫壓簧	FIRING PIN CATCH SPRING
S05	擊鐵卡榫扭簧	HAMMER CATCH SPRING
S06	止動片扭簧	SLIDE STOP SPRING
S07	扳機連桿右扭簧	TRIGGER BAR SPRING RIGHT
S08	氣流控制件壓簧	FLOATING VALVE SPRING
S09	保險扭簧	SAFETY SPRING
S10	槍柄扣環	GRIP RING
S11	導管壓簧	OUTER BARREL SPRING
S12	護弓壓件壓簧	TRIGGER GUARD PRESS SPRING
S13	射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING
S16	心棒壓簧	VALVE SPRING
S17	扳機扭簧	TRIGGER SPRING
SM31	彈匣壓簧	MAGAZINE SPRING
E01	螺絲	SCREW
E02	螺絲	SCREW
E05	螺絲	SCREW
E06	螺絲	SCREW
E07	螺絲	Hexagon screw
E08	螺絲	Hexagon screw
E09	螺絲	SCREW
E10	彈簧墊圈	SPRING WASHER
E11	螺絲	SCREW

## AAKCMB44 系列 零件分解圖 故障/BREAK DOWN

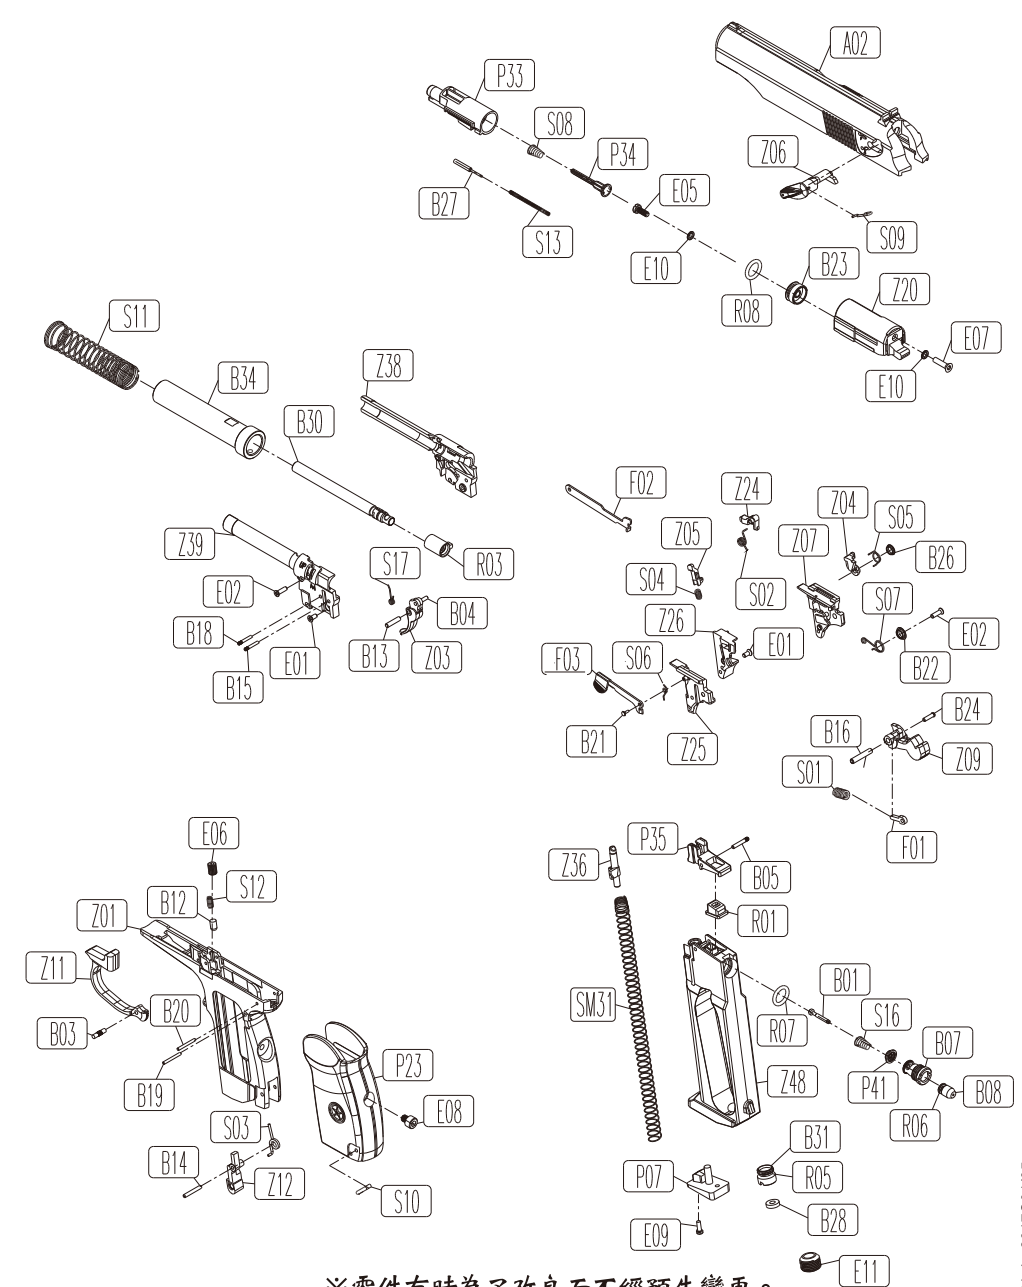

※零件有時為了改良而不經預告變更。  
Spare parts may be modified for quality improvement  
And such modification may be without advance notice.