



AAKCMB74 系說明書

AAKCMB74 INSTRUCTION MANUAL



KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE


- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

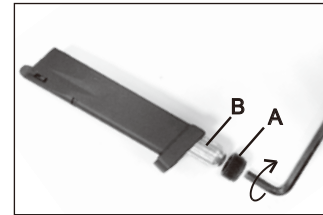

- ▲ 注意: 為維護彈匣使用壽命, 請儘可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

- ▲ 注意: 彈匣最多可裝18發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
- ▲ CAUTION: Magazine max capacity is 18 rounds. Loading more than this quantity could bring malfunctions.



4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出"卡嗒"為止。Insert fully loaded magazine in the airgun until you hear the sound of "CLICK".

5. B.B彈上膛 CHAMBERING THE BB


將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.



6. 單連發及保險切換 SWITCH SEMI AUTO AND FULL AUTO

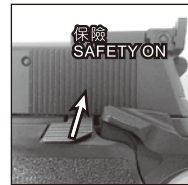

建議: 有時開關保險時會有阻力, 建議用2指來扳動保險開關較易。

SUGGESTION: Safety switch is a little bit hard. we suggest to switch both sides at once.




- ▲ 注意: 必須在上膛狀態下保險才可關閉。
- ▲ CAUTION: Safety can only be turned on when this airgun is cocked.

- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airgun has a realistic blowback feature. Be careful of the pinch point.



7. 後準星調整 REAR SIGHT ADJUSTMENT

上下準星調整
Vertical adjustment

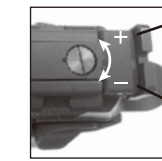


準星向上
Rear sight move up



準星向下
Rear sight move down



左右準星調整
Horizontal adjustment

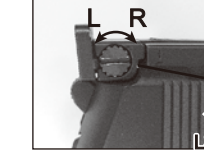

左



右

8. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。Aim the target and pull the trigger to shoot.

- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.

拆解 / DIS-ASSEMBLY

- 按下卡榫, 取出彈匣。
Press the magazine catch to release the magazine.



- 退上蓋至導管卡榫可旋轉處。
Pull the slide back until you could spin the assemble key.



- 旋轉導管卡榫至下方。
Spin the assemble key down as picture.



- 上蓋即可取出。
Remove the slide.

故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因:

THE REASON FOR BBS JAM:

- 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- 不良B.B彈
Bad quality BBs.
- 空擊發易造成零件損耗, 請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.



- * 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.

射擊過程中偶爾會發生在作動時, 上蓋突然停止無法作動, 而擊鐵回到原位, 彈匣中仍有足夠瓦斯和B.B彈。

During the shooting process, sometimes the slide and the hammer stop unexpectedly.

- * 排除: 此時並非故障, 只需重新上膛便可繼續使用。
Solution: This is no and operate again.

保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.





WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

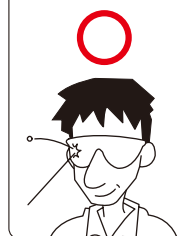

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。


★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

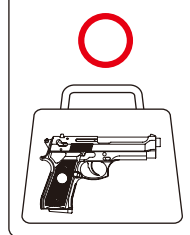

請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.

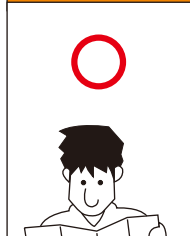

★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.




★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

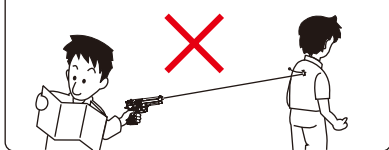

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



KMB74 系列 零件表 KMB74 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P03	滑套射嘴	Z38	槍管右蓋 4.5mm	S02	導管卡榫軸壓簧
P04	槍柄 (左)	Z40	彈匣滑粒	S03	扳機扭簧
P05	槍柄 (右)			S04	上蓋止動片壓簧
P10	心棒迫緊	F01	上蓋止動片	S05	扳機連桿扭簧
P14	槍管導桿護套	F02	扳機連桿	S06	擊鐵壓簧
P15	彈匣底座配件	F03	擊鐵壓簧導桿	S07	撞針卡榫壓簧
P36	彈匣上部	KG15-F03	彈匣底內件配件	S08	撞針拉簧
P39	氣流控制件	F05	導桿壓簧墊圈	S09	擊鐵卡榫扭簧
P60	彈匣底內件	R01	子彈迫緊 (HOP-UP)	S10	撞針扭簧
P112	氣缸迫緊	R02	氣嘴迫緊	S14	射嘴回位壓簧
				S15	保險壓簧
				S16	導桿回位緩衝壓簧
A01	上蓋	G010	O型環 1x8	S17	保險連動件扭簧
Z02	本體	G016	O型環 PU S-4 (黃)	S18	彈匣壓簧
Z04	槍管導管	G017	O形環 S-5	S19	氣流控制件壓簧
Z05	擊鐵箱 (左)	G039	O型環 2x15	S20	心棒壓簧
Z06	擊鐵箱 (右)			S21	後準星壓簧
Z07	扳機	L12	彈匣上部軸	S22	後準星左右調整壓簧
Z08	導管卡榫	B01	槍管	S23	前準星壓簧
Z09	扳機箱	B02	擊鐵箱左軸	S25	導桿回位壓簧
Z10	彈匣卡榫 (左)	B03	扳機軸		
Z11	彈匣卡榫 (右)	B04	扳機連桿軸	EA014	⌀2.0x6束鉚熱螺絲
Z12	撞針卡榫	B05	槍柄螺絲	EA041	⌀M3.0x6.0xP0.5鍍螺絲
Z13	擊鐵壓簧導桿座	B06	保險軸	EA045	⌀M3.0x8xP0.5鍍螺絲
Z14	擊鐵	B08	擊鐵箱軸	EA061	⌀Ⅲ2.3x5束黑熱螺絲
Z15	擊鐵卡榫	B09	氣閥本體	EA064	⌀Ⅲ2.3x6束黑熱螺絲
Z16	撞針	B10	心棒後部	EA108	止付螺絲4.0x4xP0.7黑
Z19	槍管導桿	B15	後準星上下調整螺絲	EC006	彈簧銷2x8黑
Z20	氣缸	B16	後準星左右調整螺絲	EC029	彈簧銷PSPSR2-8
Z21	保險 (左)	B17	後準星座軸	B001	φ1.0鋼珠
Z22	保險 (右)	B18	前準星軸	B004	SUS 3.0φ鋼珠
Z23	保險釋放件	B27	心棒		
Z31	後準星	B30	氣瓶頂針	U2	氣閥組件
Z32	後準星罩門	B37-6	氣缸迫緊墊圈	U3	氣瓶頂針組件
Z34	槍柄座	B215	氣瓶頂針迫緊	X1	內槍管組件
Z36	前準星			X2	氣缸半組件
Z37	槍管左蓋 4.5mm	S01	彈匣卡榫扭簧		

零件有時為了改良而不經預告變更

KMB74 系列 零件表 KMB74 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P03	LOADING NOZZLE	Z38	BARREL CASE (R)	S02	SLIDE CATCH PIN SPRING
P04	GRIP (L)	Z40	MAGAZINE FOLLOWER	S03	TRIGGER SPRING
P05	GRIP (R)			S04	SLIDE STOPPER SPRING
P10	VALVE PACKING	F01	SLIDE STOPPER	S05	TRIGGER BAR SPRING
P14	RECOIL SPRING GUIDE CAP	F02	TRIGGER BAR	S06	HAMMER SPRING
P15	MAGAZINE BASE ACC.	F03	HAMMER SPRING GUIDE	S07	FIRING PIN CATCH SPRING
P36	MAGAZINE RIB	KG15-F03	MAGAZINE BOTTOM CAP ACCESSORY	S08	FIRING PIN SPRING
P39	FLOATING VALVE	F05	RECOIL SPRING RING	S09	HAMMER CATCH SPRING
P60	MAGAZINE BOTTOM CAP	R01	RUBBER CHAMBER (HOP-UP)	S10	FIRING PIN SPRING
P112	CYLINDER PACKING	R02	GAS ROUTE PACKING	S14	LOADING NOZZLE RECOIL SPRING
				S15	SAFETY SPRING
				S16	RECOIL BUFFER SPRING
A01	SLIDE	G010	O-RING 1x8	S17	SAFETY CONNECTOR SPRING
Z02	FRAME	G016	O-RING PU S-4	S18	MAGAZINE SPRING
Z04	OUTER BARREL	G017	O-RING S-5	S19	FLOATING VALVE SPRING
Z05	CHASSIS (L)	G039	O-RING 2x15	S20	VALVE SPRING
Z06	CHASSIS (R)			S21	REAR SIGHT SPRING
Z07	TRIGGER	L12	MAGAZINE RIB PIN	S22	REAR SIGHT ADJUST SPRING (L & R)
Z08	BARREL CATCH	B01	INNER BARREL	S23	FRONT SIGHT SPRING
Z09	TRIGGER BASE	B02	CHASSIS PIN (L)	S25	RECOIL SPRING
Z10	MAGAZINE CATCH (L)	B03	TRIGGER PIN		
Z11	MAGAZINE CATCH (R)	B04	TRIGGER BAR AXLE	EA014	SCREW 2.0x6
Z12	FIRING PIN CATCH	B05	GRIP SCREW	EA041	SCREW M3.0x6.0xP0.5
Z13	HAMMER SPRING HOUSING	B06	SAFETY PIN	EA045	SCREW M3.0x8xP0.5
Z14	HAMMER	B08	CHASSIS PIN	EA061	SCREW 2.3x5
Z15	HAMMER CATCH	B09	VALVE FRAME	EA064	SCREW 2.3x6
Z16	FIRING PIN	B10	VALVE REAR	EA064	SCREW 2.3x6
Z19	BARREL GUIDE	B15	REAR SIGHT ADJUST SCREW (UP & DOWN)	EA108	SET SCREW 4.0x4xP0.7
Z20	CYLINDER	B16	REAR SIGHT ADJUST SCREW (L & R)	EC006	SPRING PIN 2x8
Z21	SAFETY (L)	B17	REAR SIGHT BASE PIN	EC029	SPRING PIN PSPSR2-8
Z22	SAFETY (R)	B18	FRONT SIGHT PIN	B001	BEARING
Z23	SAFETY RELEASE	B27	VALVE	B004	BEARING
Z31	REAR SIGHT	B30	PUNCTURE VALVE		
Z32	REAR SIGHT COVER	B37-6	CYLINDER PACKING RING	U2	INNER VALVE UNIT
Z34	GRIP BASE	B215	PUNCTURE VALVE PACKING	U3	PUNCTURE VALVE UNIT
Z36	FRONT SIGHT			X1	INNER BARREL UNIT
Z37	BARREL CASE (L)	S01	MAGAZINE CATCH SPRING	X2	CYLINDER UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KMB74 系列 零件分解圖 KMB74 SERIES EXPLODED VIEW

