



AAKCMB88、89系說明書

AAKCMB88、89 INSTRUCTION MANUAL



KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION


1. 取出彈匣 RELEASE MAGAZINE

- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

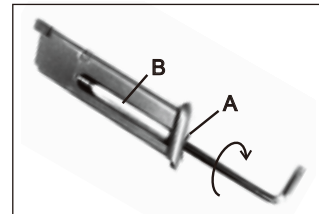

- ▲ 注意: 為維護彈匣使用壽命, 請儘可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.


3. 填裝B.B彈 LOADING BBs

為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

- ▲ 注意: 彈匣最多可裝16發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。

- ▲ CAUTION: Magazine max capacity is 16 rounds. Loading more than this quantity could bring malfunctions.

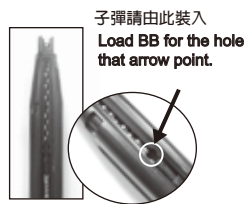

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.



6. 保險切換 SWITCH SAFETY

- ▲ 注意: 必須在上膛狀態下保險才可關閉。

- ▲ CAUTION: Safety can only be turned on when this airgun is cocked.


- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。

- ▲ CAUTION: This airgun has a realistic blowback feature. Be careful of the pinch point.



7. KCMB-88後準星調整 KCMB-88 REAR SIGHT ADJUSTMENT

上下準星調整
Vertical adjustment

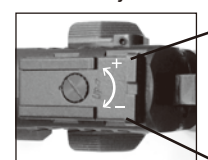


準星向上
Rear sight move up



準星向下
Rear sight move down

左右準星調整
Horizontal adjustment

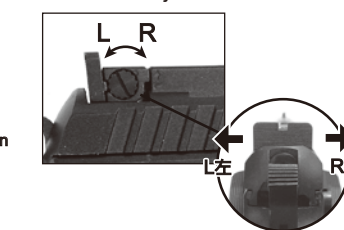

8. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.



拆解 / DIS-ASSEMBLY

1. KCMB-89系列需先卸下鏡橋, 以方便拆解。
Please take off the mount on KCMB89 before disassemble the gun.




2. 按下卡榫, 取出彈匣。
Press the magazine catch to release the magazine.



3. 退上蓋至導管卡榫。
Pull the slide until the slide stopper lock the slide.



4. 壓下槍身右面卡榫。
Press the pin on the right side of frame.

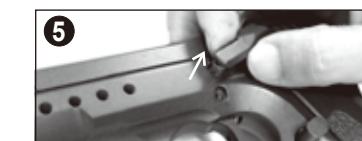

5. 導管卡榫左面往上推, 上蓋即可取出。
Pull the slide stopper from left side of pistol to take off the slide.



6. HOP UP 調整。
Adjust HOP UP system.

故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因:

THE REASON FOR BBS JAM:

- a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- b. 不良B.B彈
Bad quality BBs.
- c. 空擊發易造成零件損耗, 請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.

* 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.



保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.





WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

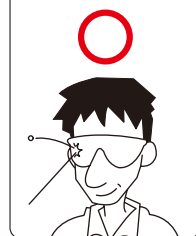


★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

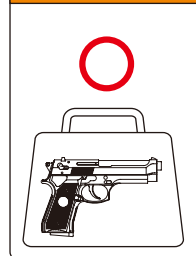

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.

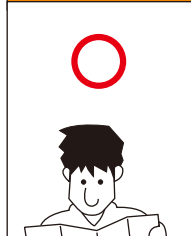

★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.



★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.



 
★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至屬法送辦。

★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

KMB-88、89 系列 零件表 KMB-88、89 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P03	滑套射嘴	Z54	上蓋前罩-89用	S05	擊鐵壓簧
P12	彈匣底座配件	Z56	槍管導桿 長-89用	S06	擊鐵卡榫扭簧
P16	氣流控制件	Z57	槍管導桿 短-88用	S07	撞針扭簧
P21	彈匣卡榫固定件	Z58	導桿套	S08	扳機連桿拉簧
P32	槍管固定件	F01	擊鐵壓簧導桿	S09	回位壓簧
P41	心棒迫緊	F03	扳機連桿	S14	保險壓簧
P43	彈匣上部	F06	回位導桿華司	S18	彈匣壓簧
P60	彈匣底內件	R01	氣嘴迫緊	S19	氣流控制件壓簧
P112	氣缸迫緊	R03H	子彈迫緊(HOP-UP)	S20	心棒壓簧
A01	上蓋	G008	O型環 1x6id	S21	後準星壓簧
A05	鏡橋	G016	O型環 S-4	S22	後準星左右調整壓簧
Z01	擊鐵箱右蓋	G039	O型環 2x15	S25	導桿緩衝壓簧
Z02	本體	B001	鋼珠1.0	EA045	螺絲 M3x8xP0.5
Z03	擊鐵卡榫	KCB75-B02	彈匣上部軸	EA061	螺絲 M3x2.3x5
Z07	上蓋止動片	B02	扳機軸	EA064	螺絲 M3x2.3x6
Z08	擊鐵	B03	保險軸	EA066	螺絲 M3x2.3x8
Z09	扳機	B04	止動片扭簧軸	EA083	內六角螺絲M3x10LxP0.5
Z10	保險釋放件	B05	擊鐵箱軸	EA086	內六角螺絲M3x30LxP0.5
Z11	彈匣卡榫	B06	射嘴壓簧導軸	EA094	M4x8LxP0.7
Z20	氣缸	B11	擊鐵軸	EA104	內六角止付螺絲M3x3LxP0.5 黑
Z23	前準星-88用	B15	後準星上下調整螺絲	EA109	內六角止付螺絲M4x6LxP0.7 黑
Z24	撞針	B16	後準星左右調整螺絲	EB002	彈簧墊圈M3.0x0.6T
Z25	擊鐵箱左蓋	KCB72-B17	後準星座軸	EB006	碟型墊圈M4x0.4T黑
Z26	擊鐵箱中蓋	B17	氣閥本體	EC012	彈簧梢2.5x8
Z31	後準星-88用	B18	心棒後部	EF009	六角扳手
KCB72-Z32	後準星罩門-88用	KCB79-B20	上蓋前罩連接件		
Z32	槍管導管	KCB79-B21	上蓋拉桿	U3	氣閥組件
Z37	槍管左蓋	B20	內槍管4.5mm	U4	氣瓶頂針組件
Z38	槍管右蓋	B30	氣瓶頂針	U5	擊鐵箱組件
Z45	保險左	B33	心棒	U6	後準星組件
Z46	KCB79保險右	B37-6	氣缸迫緊墊圈	U7	擊鐵組件
Z48	彈匣滑粒4.5	B215	氣瓶頂針迫緊	U8	扳機組件
Z51	槍柄座	S02	射嘴回位壓簧	X1	氣缸半組件
Z52	槍柄左	S03	彈匣卡榫扭簧	X2	內槍管組件
Z53	槍柄右	S04	止動片扭簧		

零件有時為了改良而不經預告變更

KMB-88、89 系列 零件表 KMB-88、89 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P03	LOADING NOZZLE	Z54	COMPENSATOR(89)	S05	HAMMER SPRING
P12	MAGAZINE BASE ACC.	Z56	RECOIL GUIDE ROD(89)	S06	HAMMER CATCH SPRING
P16	FLOATING VALVE	Z57	RECOIL GUIDE ROD(88)	S07	FIRING PIN SPRING
P21	MAGAZINE CATCH JOINT	Z58	RECOIL GUIDE ROD CAP	S08	TRIGGER BAR SPRING
P32	BARREL HOLD	F01	HAMMER SPRING BAR	S09	RECOIL SPRING
P41	VALVE PACKING	F03	TRIGGER BAR	S14	SAFETY SPRING
P43	MAGAZINE RIB	F06	RECOIL GUIDE ROD WASHER	S18	MAGAZINE SPRING
P60	MAGAZINE BOTTOM CAP	R01	GAS ROUTE PACKING	S19	FLOATING VALVE SPRING
P112	CYLINDER PACKING	R03H	RUBBER CHAMBER(HOP-UP)	S20	VALVE SPRING
A01	SLIDE	G008	O-RING 1x6id	S21	REAR SIGHT SPRING
A05	OPTIC MOUNT	G016	O-RING S-4	S22	REAR SIGHT ADJUST SPRING (L & R)
Z01	CHASSIS (R)	G039	O-RING 2x15	S25	RECOIL GUIDE ROD BUMPER SPRING
Z02	FRAME	B001	STEEL BALL	EA045	SCREW M3x8xP0.5
Z03	HAMMER CATCH	KCB75-B02	MAGAZINE RIB PIN	EA061	SCREW 2.3x5
Z07	SLIDE STOPPER	B02	TRIGGER PIN	EA064	SCREW 2.3x6
Z08	HAMMER	B03	SAFETY PIN	EA066	SCREW 2.3x8
Z09	TRIGGER	B04	SLIDE STOPPER SPRING PIN	EA083	SCREW M3x10LxP0.5
Z10	SAFETY RELEASE	B05	CHASSIS PIN	EA086	SCREW M3x30LxP0.5
Z11	MAGAZINE CATCH	B06	FLOATING NOZZLE SPRING PIN	EA094	SCREW M4x8LxP0.7
Z20	CYLINDER	B11	HAMMER PIN	EA104	SCREW M3x3LxP0.5
Z23	FRONT SIGHT	B15	REAR SIGHT ADJUST SCREW (UP & DOWN)	EA109	SCREW M4x6LxP0.7
Z24	FIRING PIN	B16	REAR SIGHT ADJUST SCREW (R & L)	EB002	SPRING WASHER M3.0x0.6T
Z25	CHASSIS (L)	KCB72-B17	REAR SIGHT BASE PIN	EB006	SPRING WASHER M4x0.4T
Z26	CHASSIS (M)	B17	VALVE FRAME	EC012	SCREW 2.5x8
Z31	REAR SIGHT	B18	VALVE REAR	EF009	WRENCH
KCB72-Z32	REAR SIGHT COVER	KCB79-B20	COMPENSATOR CONNECTOR (89)		
Z32	OUTER BARREL	KCB79-B21	SLIDE COCKING BAR(89)	U3	INNER VALVE UNIT
Z37	BARREL CASE(L)	B20	INNER BARREL	U4	PUNCTURE VALVE UNIT
Z38	BARREL CASE(R)	B30	INNER VALVE	U5	CHASSIS UNIT
Z45	SAFETY (L)	B33	VALVE	U6	REAR SIGHT UNIT
Z46	SAFETY (R)	B37-6	CYLINDER PACKING RING	U7	HAMMER UNIT
Z48	MAGAZINE FOLLOWER	B215	INNER VALVE PACKING	U8	TRIGGER UNIT
Z51	GRIP BASE	S02	LOADING NOZZLE RECOIL SPRING	X1	CYLINDER UNIT
Z52	GRIP (L)	S03	MAGAZINE CATCH SPRING	X2	INNER BARREL UNIT
Z53	GRIP (R)	S04	SLIDE STOPPER SPRING		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KMB-88、89 系列 零件分解圖 KMB-88、89 SERIES EXPLODED VIEW

