

CQBP M45 AI



CO2 Cartridge is not included
12g

MADE IN TAIWAN

AAKCMD40 系列說明書 AAKCMD40 INSTRUCTION MANUAL

KWC KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1978 www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



射擊/SHOOTING

 
射擊前的準備 BEFORE SHOOTING



1. 按下卡榫
Press the button.
2. 取出彈匣
Release the magazine.

3. 使用六角板手反時針方向取出彈匣底內件。
Use hexagonal wrench to remove the magazine cap by counter clockwise.

4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

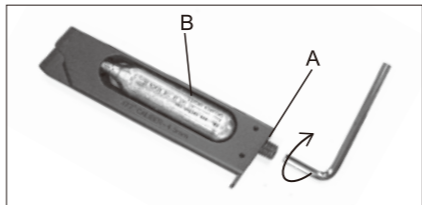

5. 拉下滑粒。
Pull the magazine follower down.
6. 填裝B.B彈。
Loading BBs
為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.
7. 最多可裝21粒。
Maximum BB capacity is 21 rounds.

射擊 SHOOTING

1. 將裝好B.B彈的彈匣插入槍身上推入，直到彈匣卡榫發出“卡際”為止。
Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.



2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.



- ⚠️※注意：在長期不使用的狀態下，請將彈匣內氣體洩放掉。
- ⚠️ CAUTION：Release all the gas in the magazine when it will be unused for a long period of time.

安全裝置 SAFETY

可射擊
SAFETY OFF

保險
SAFETY ON

 


故障/BREAK DOWN

故障的原因與排除 BREAK DOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的KWC B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use the best quality KWC BB to avoid jamming problem.
2. 當卡彈時，請儘可能先取出彈匣，再以不傷槍管的軟質細棒(不可大於4.4mm直徑)從槍口置入清除。
When BB jammed, first please release the magazine from pistol then use a soft stick (diameter no bigger than 4.4mm) to clear up the barrel.
3. 空擊發易造成零件損耗，請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。
Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.
5. 使用一段時間後，請再次用中性矽油脂潤滑撞針及扳機軸心。
Please spray the lubricant into firing pin and trigger pin.

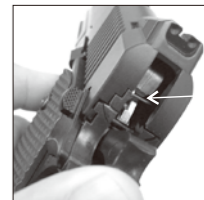

⚠️ WARNING

請務必嚴格遵守 使用說明指導書
For your safety, please read this manual carefully before use.

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

1. 除了發射時外，不要將手指頭掛在板機上。
2. 選擇安全與適當標靶
3. 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
4. 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
5. 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
6. 請妥善保管產品在未未成年孩童無法伸手取得的場所。
7. 每次使用前後都應該檢查撞彈物，假如撞彈物表面有磨損失效或是反彈時請停止使用。
8. 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
9. 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
10. 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

1. Do not put your finger on the trigger except shooting.
2. Please choose safe and proper target.
3. Please always keep the airgun on safe and unloaded when not using.
4. Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is “on safe”. Never point the airgun at any people.
5. Avoid ricochet. Never shoot at a hard or flat surface or at water.
6. Keep the airgun out of reach for small children.
7. Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
8. Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface ③reused BB that has been fired④incorrect projectiles not design for this airgun
9. Do not expose CO2 cartridges to heat or store them at temperatures above 50° C(122° F). CO2 cartridges may over heat or explode at temperatures above 50° C(122° F).
10. Check any gun that has been dropped to ensure that its function has not been affected.

 
WARNING 警告

AAKCMD40 系列零件表 AAKCMD40 SERIES PARTS LIST

AAKCMD40 系列零件分解圖 AAKCMD40 SERIES EXPLODED VIEW

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airsoft.

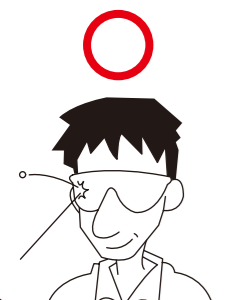

★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。

★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.



Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airsoft.

 


★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

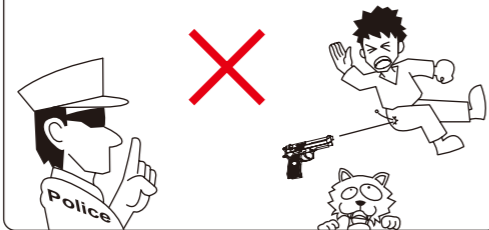


★請確認後再發射BB彈方向，附近無人或動物存在。

 ★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

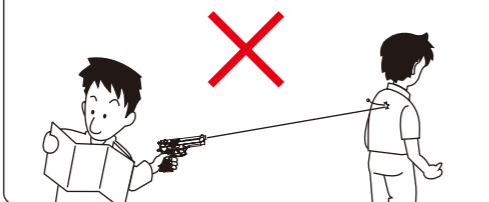


★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.

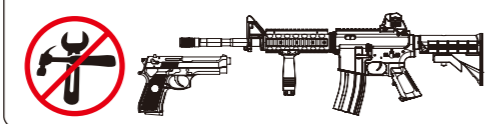

圖號	零件名稱	UNIT
Z01	上蓋	SLIDE
Z02	槍管導管	OUTER BARREL
P02	本體	FRAME
P03	握柄	GRIP
P04	扳機	TRIGGER
P05	保險卡榫導件	PLUNGER GUIDE
P06	彈匣卡榫	MAGAZINE CATCH
P07	彈匣卡榫配件	MAGAZINE CATCH JOINT
P08	保險定位軸	SAFETY PLUNGER
P09	上蓋止動片軸	SLIDE STOP SLEEVE
P10	槍管導管	OUTER BARREL
P11/Z03	擊鐵箱(右)	CHASSIS CASE (R)
P12/Z04	擊鐵箱(左)	CHASSIS CASE (L)
P13	上蓋止動片	SLIDE STOP
P14	擊鐵	HAMMER
P15	保險(左)	SAFETY (L)
P16	彈匣滑粒	MAGAZINE FOLLOWER
P17	內槍管導引件	INNER BARREL GUIDE
P18	槍柄(右)	GRIP (R)
P19	槍柄(左)	GRIP (L)
P20	UKG-01心棒蓋迫緊	VALVE PACKING
Z05	撞針	FIRING PIN
Z06	彈匣	MAGAZINE
Z07	彈匣底座	MAGAZINE BASE
Z08	握柄配重	REAR GRIP WEIGHT
Z09	扳機配件	TRIGGER (REAR)
Z10	槍管連動件	BARREL TOW
Z11	扳機連動件	TRIGGER TOW
B01	撞針軸	FIRING PIN
B02	KG-42X 氣瓶頂針(新規)	KG-42X CARTRIDGE STAB NEEDLE(NEW)
B03	KM-42 槍管(銅)	BARREL
B04	心棒蓋	VALVE CAP
B05	RKM系 心棒(二孔)	VALVE
B06	氣瓶頂針迫緊(TEFLON)	CARTRIDGE STAB NEEDLE PACKING(TEFLON)

圖號	零件名稱	UNIT
E01	槍柄螺絲	GRIP SCREW
E02	止付螺絲M10x20黑	SOCKET SCREW M10X20
E03	彈簧梢	SPRING PIN
E04	擊鐵箱螺絲	HAMMER CASE SCREW
E05	E型扣環	E BUCKLE
F01	扳機連桿	TRIGGER BAR
F02	保險釋放件	SAFETY DISCHARGE NOSE
F04	YA-3軸(扳機連動件軸)	YA-3 PIN (TRIGGER CONNECTOR PIN)
F05	軸(擊鐵、擊鐵箱)	HAMMER CASE PIN
F06	軸(本體箱)	PIN (FRAME)
F07	軸(扳機)	PIN (TRIGGER)
F08	心棒壓簧墊圈	VALVE SPRING GASKET
S01	扳機連桿壓簧	TRIGGER BAR SPRING
S02	撞針緩衝扭簧	FIRING PIN BUFFER SPRING
S04	撞針扭簧	FIRING PIN SPRING
S05	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
S06	擊鐵扭簧	HAMMER SPRING
S07	扳機配件扭簧	TRIGGER SPRING
S08	保險定位軸壓簧	PLUNGER GUIDE SPRING
S10	扳機連動件扭簧	TRIGGER TOW SPRING
S11	心棒壓簧	VALAVE SPRING
S12	彈匣壓簧	MAGAZINE SPRING
R01	KM-47 HOP-UP 4.5 子彈迫緊	RUBBER CHAMBER
R02	O形環 1X5	O-RING
R03	O形環 1X3	O-RING
R04	O形環 1X4	O-RING
R05	O形環 $\phi 0.8 \times \phi 11.3 \text{id}$ 橘色	O-RING
R06	O形環 1.45x6.9id	O-RING
U02	六角扳手	VALVE SET
U1	內槍管組件	INNER BARREL UINT
U2	氣瓶頂針組件	INNER VALVE UNIT
X1	擊鐵箱組件	HAMMER UNIT

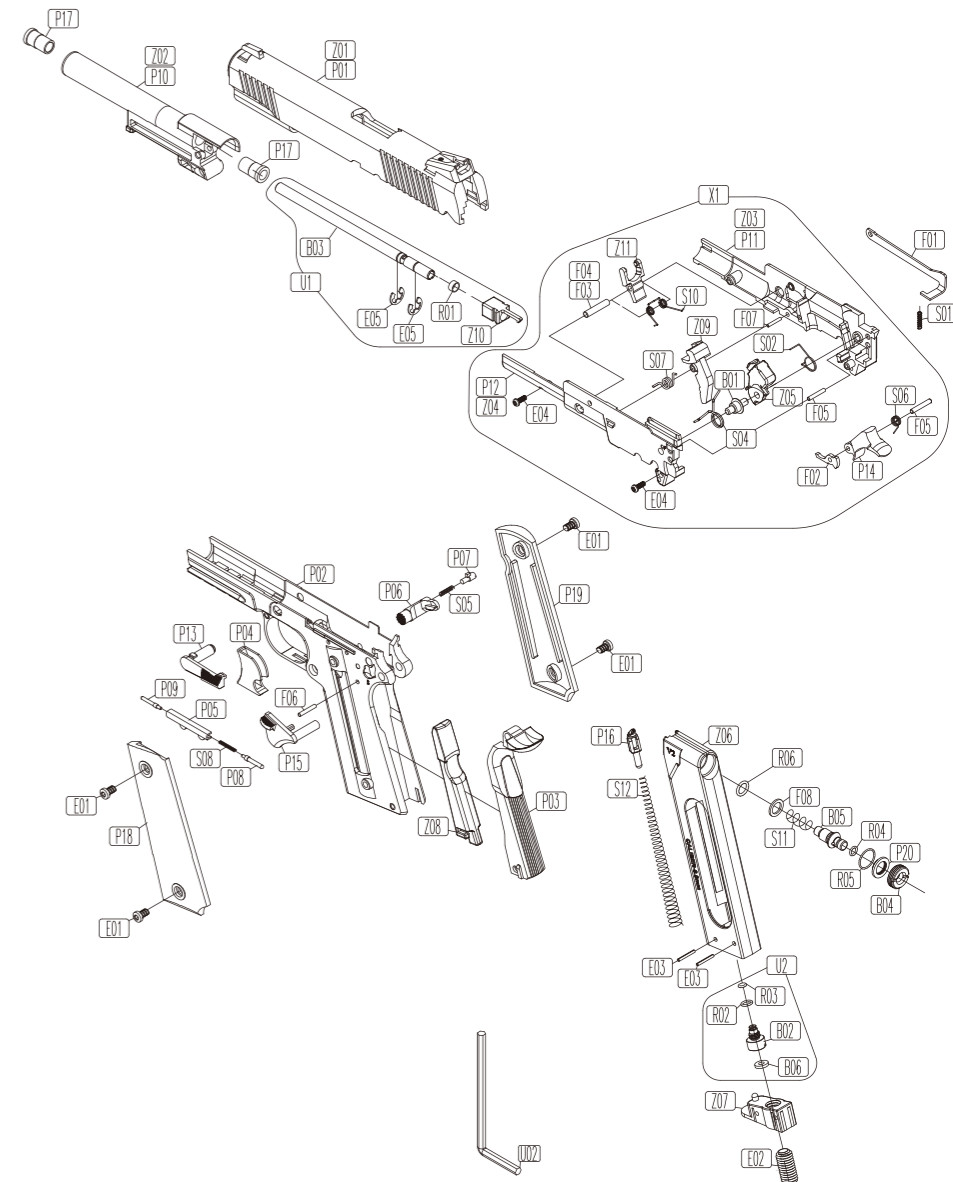 

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.