

1911^{GS}



CO2 Cartridge is not included

MADE IN TAIWAN

AAKC42 系說明書

AAKC42 INSTRUCTION MANUAL



KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號

NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)

TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

射擊前的準備

BEFORE SHOOTING



1. 按下卡榫
Press the button.

2. 取出彈匣
Release the magazine.

 
3. 使用六角扳手反時針方向取出彈匣底內件。

Use hexagonal wrench to remove the magazine cap by counter-clockwise.



4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。

Turn the magazine cap out counter-clockwise, and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

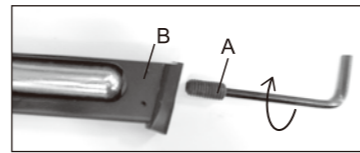

5. 拉下滑粒。

Pull the magazine follower down.

6. 填裝B.B彈。

Loading BBs.

為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.



7. 最多可裝20粒。

Maximum BB capacity is 20 rounds.

射擊

SHOOTING

1. 將裝好B.B彈的彈匣插入槍身上推入，直到彈匣卡榫發出“卡嗒”為止。

Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.



2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.

▲ 注意：在長期不使用的狀態下，請將彈匣內的氣體洩放掉。

▲ CAUTION: Release all of the gas in the magazine when it will not use in long-term period.



安全裝置

SAFETY



可射擊
SAFETY OFF



保險
SAFETY ON

故障原因與排除 / BREAKDOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的 B.B彈。

Bad quality BB is the main reason to cause BB jam. Please use high quality BB avoid jamming problem.

2. 當卡彈時，請儘可能先取出彈匣，再以不傷槍管的軟質細棒（不可大於4.4mm直徑），從槍口置入清除。

When BB jamming, first please release the magazine from pistol then use a soft stick (diameter no bigger than 4.4mm) to clear up the barrel.

3. 空擊發易造成零件損耗，請避免此動作。

Please avoid dry firing, for it could cause parts deformed or damage.

4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。

Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.

5. 使用一段時間後，請再次用含矽油之潤滑油，潤滑撞針及扳機軸心。

Please spray lubricant(with silicone oil type) at firing pin and trigger pin after a certain of use, pictures shown.



WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

 
此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當目標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成io年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airgun.

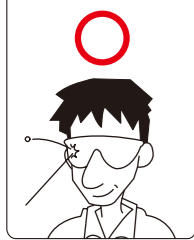

 ★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。
★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

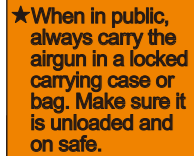

 
★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airgun.

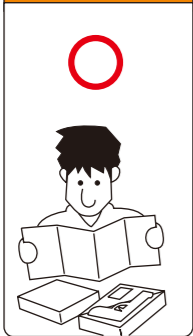


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.



 
★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.

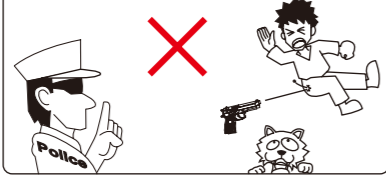

 ★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

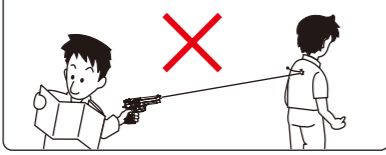

 ★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

KCMD42 系列 零件表 KCMD42 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P02	本體	Z15	槍柄(右)	S06	撞針緩衝扭簧
P03	握柄	Z16	氣瓶底座	S07	保險定位軸壓簧
P04	上蓋止動片	Z20	槍管連動件	S404	心棒壓簧
P05	扳機	Z21	扳機連動件	S471	彈匣壓簧
P06	保險卡榫導件			SM4	扳機連動件扭簧
P07	彈匣卡榫	B01	撞針軸	SM5	扳機配件扭簧
P08	彈匣卡榫配件	B02	軸		
P09	擊鐵	B11	槍管	E01	槍柄螺絲
P16	保險定位軸	B15	心棒	E02	⊕ 2.3x 6尖黑熱
P17	上蓋止動片軸	B19	心棒蓋	E03	E型扣環
P27	內槍管導引件	B33	氣瓶頂針	E04	止付螺絲 M10x20 黑
P31	心棒蓋迫緊	B215	氣瓶頂針迫緊	E06	彈簧銷
P477	彈匣滑粒			E07	彈簧銷
		F01	扳機連桿		
Z01	上蓋	F02	保險釋放件	R01	子彈迫緊HOP-UP
Z02	撞針	F03	軸(本體)	R02	O形環 1x5
Z04	彈匣底座	F04	軸(扳機)	R03	O形環 1x3
Z05	扳機配件	F05	軸(擊鐵、擊鐵箱)	R04	O型環 1x4
Z07	握柄配重	F401	心棒壓簧墊圈	R05	O型環 0.8x11.3id
Z10	槍管導管			R07	O形環 1.45x6.9id
Z11	擊鐵箱(右)	S01	扳機連桿壓簧		
Z12	擊鐵箱(左)	S02	彈匣卡榫壓簧	U1	內槍管組件
Z13	保險(左)	S03	撞針扭簧	U2	氣瓶頂針組件
Z14	槍柄(左)	S05	擊鐵扭簧	X1	擊鐵箱組件

零件有時為了改良而不經預告變更

KCMD42 系列 零件表 KCMD42 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P02	FRAME	Z15	GRIP (R)	S06	FIRING PIN BUFFER SPRING
P03	GRIP	Z16	CARTRIDGE BASE	S07	SAFETY LOCATOR PIN SPRING
P04	SLIDE STOPPER	Z20	BARREL TOW	S404	VALVE SPRING
P05	TRIGGER	Z21	TRIGGER CONNECTOR	S471	MAGAZINE SPRING
P06	SAFETY CATCH GUIDE			SM4	TRIGGER CONNECTOR SPRING
P07	MAGAZINE CATCH	B01	FIRING PIN AXLE	SM5	TRIGGER ACCESSORY SPRING
P08	MAGAZINE CATCH ACCESSORY	B02	PIN		
P09	HAMMER	B11	INNER BARREL	E01	GRIP SCREW
P16	SAFETY LOCATOR PIN	B15	VALVE	E02	SCREW 2.3x 6
P17	SLIDE STOPPER PIN	B19	VALVE CAP	E03	E-RING
P27	INNER BARREL GUIDE	B33	PUNCTURE VALVE	E04	SET SCREW M10x20
P31	VALVE PACKING	B215	PUNCTURE VALVE PACKING	E06	SPRING PIN
P477	MAGAZINE FOLLOWER			E07	SPRING PIN
		F01	TRIGGER BAR		
Z01	SLIDE	F02	SAFETY RELEASE	R01	RUBBER CHAMBER (HOP-UP)
Z02	FIRING PIN	F03	PIN (FRAME)	R02	O-RING 1x5
Z04	MAGAZINE BASE	F04	PIN (TRIGGER)	R03	O-RING 1x3
Z05	TRIGGER ACCESSORY	F05	PIN (HAMMER, CHASSIS)	R04	O-RING 1x4
Z07	REAR GRIP WEIGHT	F401	VALVE SPRING GASKET	R05	O-RING 0.8x11.3id
Z10	OUTER BARREL			R07	O-RING 1.45x6.9id
Z11	CHASSIS (R)	S01	TRIGGER BAR SPRING		
Z12	CHASSIS (L)	S02	MAGAZINE CATCH SPRING	U1	INNER BARREL UNIT
Z13	SAFETY (L)	S03	FIRING PIN SPRING	U2	PUNCTURE VALVE UNIT
Z14	GRIP (L)	S05	HAMMER SPRING	X1	CHASSIS UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCMD42 系列 零件分解圖 KCMD42 SERIES EXPLODED VIEW

