

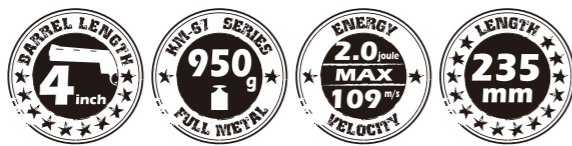


MODEL 357

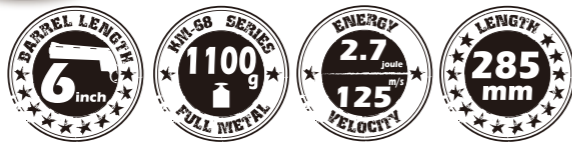


射擊/SHOOTING

射擊前的準備 BEFORE SHOOTING

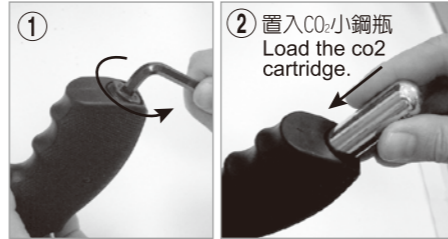

- 使用六角扳手反時針方向取出彈匣底內件。
Use hexagonal wrench to remove the magazine cap by counter clockwise.
- 逆時針轉出彈匣底內件後，置入小鋼瓶，再以順時針方向鎖緊彈匣底內件。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap a out counter-clockwise and place CO2 cartridge inside the magazine. Rapidly turn the screw clockwise when piercing the cartridge in the magazine.

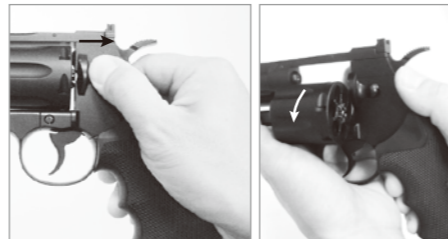

- 右手先將彈倉卡榫往右移，左手再托出彈倉。
Press the magazine release button and push the magazine out from the backside of the gun.



- 再把6顆子彈殼放入裝彈器。
Place six bullets in the speedloader.

故障/BREAK DOWN

故障的原因與排除 BREAK DOWN FAQ

- 不良的B.B彈是造成卡彈的原因，請使用品質優良的KWC B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use the best quality KWC BB to avoid jamming problem.
- 當卡彈時，請盡可能先取出彈匣，再以免傷槍管的軟質細棒(不可大於5.9mm直徑)，從槍口置入清除。
When you meet with 6 mm BB jam, please release the magazine at first and use the soft stick (no bigger than 5.9 mm) to clean the barrel out.

- 使用一段時間後，請再次用中性矽油脂潤滑撞針及扳機軸心。
Please spray the lubricant into firing pin and trigger pin.



WARNING


請務必嚴格遵守 使用說明指導書
For your safety, please read this manual carefully before use.

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查撞彈物，假如撞彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm ②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

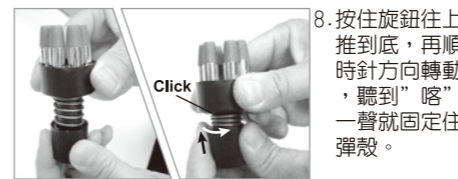

8. 按住旋鈕往上推到底，再順時針方向轉動，聽到“喀”一聲就固定住彈殼。




- 裝彈器固定住子彈後，向彈倉6孔位放入到底，就會自動進入子彈定位。
Once six bullets are in speedloader, just push the speedloader into the magazine, and bullets will automatically loaded.



- 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.
- 注意：在長期不使用的狀態下，請將彈匣內的氣體洩放掉。
CAUTION: Release all of the gas in the magazine when it is unused in long-term period.

安全裝置 SAFETY

可射擊 SAFETY OFF 保險 SAFETY ON

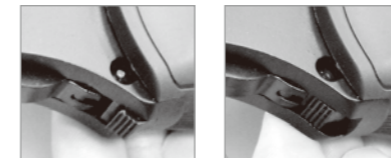


⚠️ WARNING 注意事項

AAKCMD66 67 68 系列 零件表 AAKCMD66 67 68 SERIES PARTS LIST


AAKCMD66 67 68 系列 零件分解圖 AAKCMD66 67 68 SERIES EXPLODED VIEW

★使用玩具槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airgun.

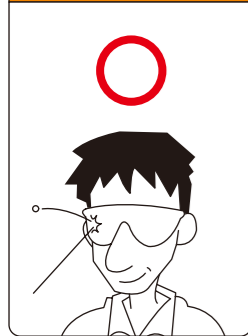


★不可攜帶玩具槍在公共場所行走，請務必裝在袋子或盒子內。

★Always transport an airgun in a locked carrying case. Make sure it is unloaded and on safe.

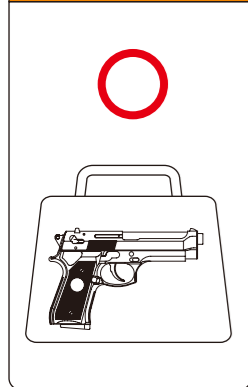


★使用玩具槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airgun.

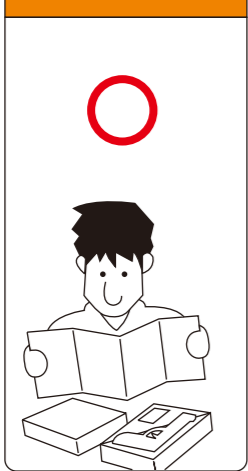


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用玩具槍，也請不要拿玩具槍對準人或動物。
★Never brandish or aiming this airgun at any people or domestic animals. Brandish this airgun in public is dangerous and may be a crime.

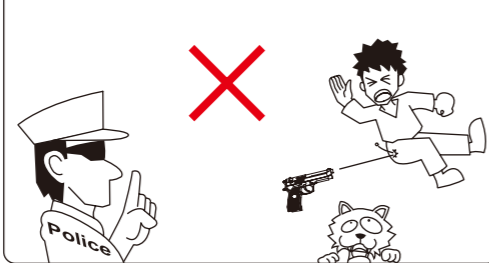

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

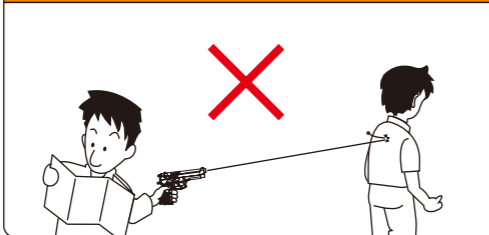


★不可任意改造或加工玩具槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airgun may cause malfunction, void your warranty and may make it unsafe to use.

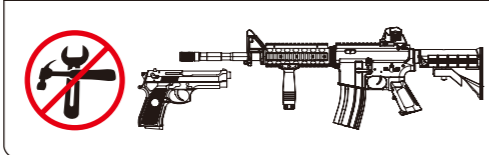

Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

圖號	零件名稱	UNIT	圖號	零件名稱	UNIT	圖號	零件名稱	UNIT
P03	保險	SAFETY	F01	擊鐵下部	HAMMER BASE	B73	KM-67槍管	4" BARREL (4.5mm)
P04	彈倉定位件	CYLINDER LOCK	F02	擊鐵導桿(鍍鉻)	HAMMER GUIDE	B83	KM-68槍管	6" BARREL (4.5mm)
P11	氣閥蓋迫緊	VALVE CAP PACKING	F03	彈匣底內件配件	CO2 CARTRIDGE CAP			
P13	裝彈器主体	SPEEDLOADER FRAME	F04	槍管套軸	FRONT PART OF THE BODY	S01	撞針	FIRING PIN
P14	裝彈器主軸	SPEEDLOADER MAIN SHAFT	F05	棘輪華司	EXACTOR WASHER	S02	棘輪爪扭簧	HAND SPRING
P15	裝彈器內主軸	SPEEDLOADER INNER SHAFT				S03	棘輪軸壓簧	CYLINDER SPRING
P16	裝彈器旋鈕	SPEEDLOADER KNOB	R02	氣嘴迫緊	GAS ROUTE PACKING	S04	槍管套壓簧	BARREL CAP SPRING
P22	槍管後內套	BARREL CAP	R03	O型環S-5	O RING	S05	擊鐵導桿壓簧	HAMMER GUIDE SPRING
P25	槍管套(滑塊替換)	BARREL CONNECTOR	R04	O型環1X5	O RING	S06	撞針滑塊壓簧	FIRING PIN SPRING
P27	槍管固定套	BARREL LOCK KNOT	R05	O型環S-8	O RING	S07	擊鐵卡桿壓簧	HAMMER BLOCK SPRING
P28	彈頭	BULLET NUT	R06	O型環1X2	O RING	S08	照門底座壓簧	REAR SIGHT BASE SPRING
P31	槍柄左	GRIP (LEFT)	R07	O型環S-10	O RING	S09	照門壓簧	REAR SIGHT SPRING
P32	槍柄右	GRIP (RIGHT)				S10	裝彈器旋鈕壓簧	SPEEDLOADER TWIST SPRING
P60	彈匣底內件	MAGAZINE CAP	B01	心棒蓋	VALVE CAP	S11	裝彈器主軸壓簧	SPEEDLOADER MAIN SPRING
			B02	心棒	VALVE	S13	心棒壓簧	VALVE SPRING
			B03	KM-66槍管	2.5" BARREL (4.5mm)	S14	彈倉卡桿壓簧	LATCH SPRING
			B04	心棒華司	VALVE WASHER	S20	擊鐵導件內套壓簧	HAMMER SPRING
Z01	本体	FRAME	B05	棘輪軸帽(鍍鉻)	EXJECTOR ROD CAP	E01	螺絲M3X6黑	SCREW
Z02	彈倉	CYLINDER	B06	彈倉中心軸	CYLINDER PIN	E02	螺絲M3X8黑	SCREW
Z03	本体側蓋	SIDE PLATE	B07	擊鎚(鍍鉻)	HAMMER	E03	螺絲3.0x6黑	SCREW
Z04	後準星	REAR SIGHT	B08	擊鐵配件軸	HAMMER PIN A	E04	螺絲M3X10*P0.5	SCREW
Z05	擊鐵導桿導件	HAMMER GUIDE	B09	彈倉卡桿軸	LATCH PIN	E05	彈簧墊圈	WASHER
Z07	棘輪	EXTRACTOR	B10	擊鐵導桿華司	HAMMER GUIDE WASHER	E06	螺絲M2.6X8*P0.45	SCREW
Z08	擊鐵	HAMMER	B11	彈倉支座管	CYLINDER ROLLER SLEEVE	E07	彈簧銷2.5X22L	SPRING PIN
Z09	扳機	TRIGGER	B13	彈倉支座華司	CYLINDER WASHER	E08	螺絲2.3X6束黑熱	SCREW
Z10	棘輪爪	HAND	B14	軸A-裝彈器內主軸	ROLLER (SHELL LOADER)	E09	彈簧銷2.0X8L黑	SPRING PIN
Z11	氣槽主体	GAS TANK	B15	擊鐵下部軸	HAMMER PIN B	E10	螺絲4.0x6黑	SCREW
Z12	彈倉支座	CRANE	B16	氣閥蓋迫緊華司	VALVE CAP WASHER	E11	一字螺絲M3X6鉻	SCREW
Z13	彈殼	BULLET NUT	B17	KC-66軸(照門用)(鍍鉻)	PIN (FRONT SIGHT)			
Z14	撞針滑塊	FIRING PIN SLIDE	B20	擊鐵導件內套	HAMMER GUIDE SLEEVE			
Z15	後準星座	REAR SIGHT BASE	B21	氣瓶頂針迫緊	CARTRIDGE VALVE PACKING	U1	彈殼組件	BULLET
Z16	彈倉卡桿	LATCH	B22	氣瓶頂針M1.2*P1*逆牙	CARTRIDGE VALVE	U2	裝彈器組件	SPEEDLOADER
Z17	擊鐵配件	HAMMER JOINT	B23	KG-61軸(槍柄)	GRIP PIN	U3	氣瓶頂針組件	VALVE PACKING SET
Z66	本体前部-2.5in	FRONT PART OF BODY (2.5")	B62	KC-66棘輪軸-2.5in(鍍鉻)	EXJECTOR ROD 2.5"	U4	氣閥組件	VALVE SET
Z76	本体前部-4in	FRONT PART OF BODY (4")	B72	KC-67棘輪軸-4in(鍍鉻)	EXJECTOR ROD 4"			
Z86	本体前部-6in	FRONT PART OF BODY (6")						

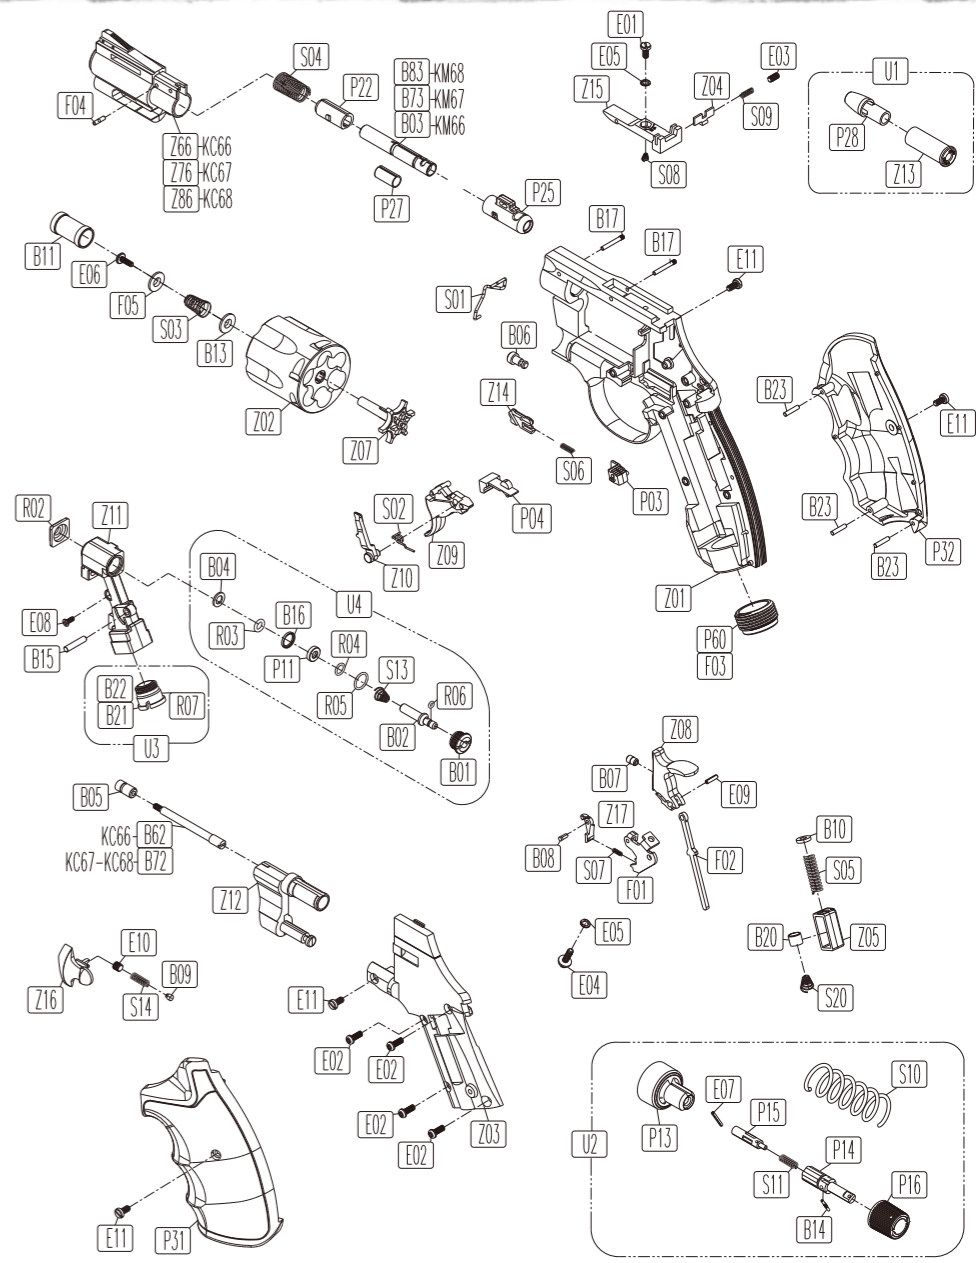

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.