 




AAKCMF15系說明書

AAKCMF15 INSTRUCTION MANUAL

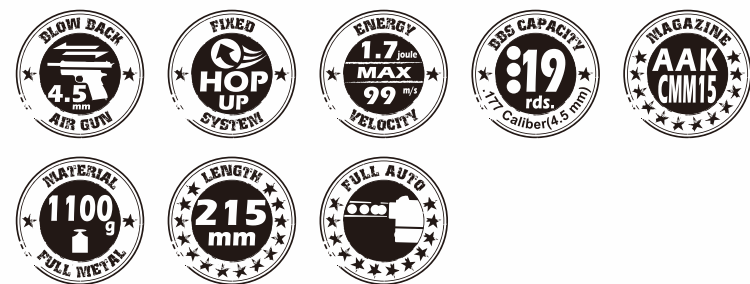

KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE

 
- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

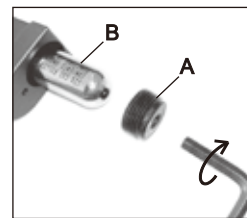

- ▲ 注意: 為維護彈匣使用壽命, 請儘可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

- ▲ 注意: 彈匣最多可裝19發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。

- ▲ CAUTION: Magazine max capacity is 19 rounds. Loading more than this quantity could bring malfunctions.



4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.

6. 單連發及保險切換 SWITCH SEMI AUTO AND FULL AUTO

- ▲ 注意: 必須在上膛狀態下保險才可關閉
- ▲ CAUTION: Safety can only be turned on when this pistol is cocked.



若是你購買的槍有連發系統, 請依照下圖示操作啟動連發系統
If your pistol has full auto function, you may also switch to full auto by instruction below.

- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airgun has a realistic blowback feature. Be careful of the pinch point.



7. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.



- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.

拆解 / DIS-ASSEMBLY

1. 按下卡榫, 取出彈匣。
Press the magazine catch to release the magazine.
2. 按下右邊卡鍵鈕。
Press the button as picture.
3. 旋轉左邊導管卡榫置下方。
Spin the Barrel Lock Pin down as picture.
4. 上蓋即可取出。
Remove the slide.



 
- ▲ 注意: 取出上蓋時需小心回位導桿鬆脫彈出。
- ▲ CAUTION: Pay attention on the recoil spring guide and do not let it leap from the slide.

故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:

- a. 裝彈排列不整齊 The BBs in the magazine does not line up very well.
- b. 不良B.B彈 Bad quality BBs.
- c. 空擊發易造成零件損耗, 請避免此動作 Please avoid dry firing, for it it could cause parts deformed or damage.

* 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.

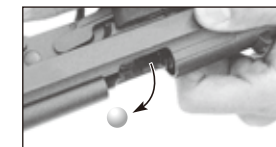

射擊過程中偶而會發生, 在作動時上蓋突然停止無法作動, 而擊鐵回到原位, 彈匣中仍有足夠瓦斯和B.B彈。
During the shooting process, sometimes the Slide and the Hammer stop unexpectedly.

 


* 排除: 此時並非故障, 只需重新上膛便可繼續使用。
Solution: This is not a failure. Just reload and operate again.

保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

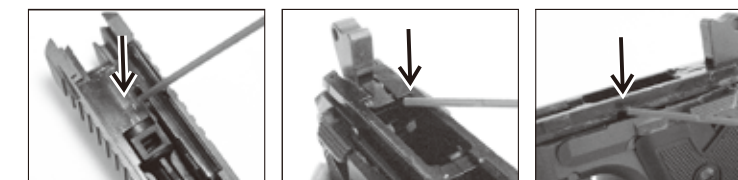

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

 
- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

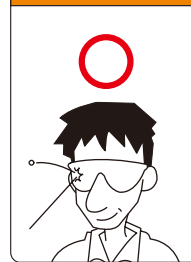

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

 ★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

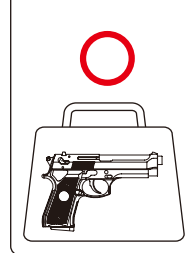

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.



★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.



 
★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.




★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

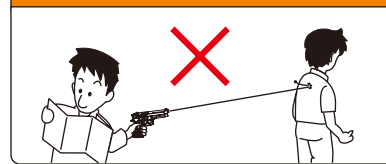

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

KCMF15 系列 零件表 KCMF15 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P01	彈匣滑粒	Z45	槍管導管	KMB15-B31-1	氣閥本體
P02	彈匣底件	Z27	彈匣卡榫	KMB15-B32-1	心榫後部
P03	槍柄(左)	Z28	擊鐵導桿壓簧配件	KG12-B215	氣瓶頂針迫緊
P04	槍柄(右)	Z51	本體		
P06	射嘴			S01	鈹機扭簧
P07	氣流控制件(無肋)	F01	上蓋滑軌	S02	鈹機連桿扭簧
P08	氣缸迫緊	F02	擊鐵導桿	S03	擊鐵卡榫扭簧
P09	彈匣上部	F03	彈匣底內件配件	KMB15-S04-1	擊鐵導桿壓簧
KMB15-P10	心榫迫緊			S05	導桿回位壓簧
KG12-P60	彈匣底內件	KMB15-R01	子彈迫緊	S06	射嘴回位壓簧
		R02	氣嘴迫緊	S07	保險壓簧
A01	上蓋	G010	O型環 1x8id	S08	切換件扭簧
		G016	O型環 S-4	S09	連發卡榫扭簧
Z01	擊鐵箱(左)	G020	O形環 S-6	S10-1	止動片扭簧
Z02	擊鐵箱(右)	G039	O型環 2x15	S12	卡鍵按鈕壓簧
Z03	擊鐵			S13	氣閥門壓簧
Z04	鈹機			S14	撞針扭簧
Z05	擊鐵卡榫	L2	槍柄螺絲	S15	彈匣卡榫壓簧
Z06	鈹機連桿	L5	擊鐵卡榫軸	S18	彈匣壓簧
Z07	連發切換件	L7	連發卡榫軸	KG15-S20	心榫壓簧
Z07S	單發切換件	L12	彈匣上部軸	S21	槍管左右蓋壓簧
Z08	切換件連桿	L13	鈹機軸	EA045	⊕M3x8xP0.5
Z09	連發卡榫	L16	單連發連桿軸	EA046	⊕M3.0x10 黑 P=0.5
Z10	氣閥門	L17	後座力緩衝件	EA057	⊕M2.0x8 黑 P=0.4
Z11	撞針	L19	導管前部軸	EA061	⊕M2.3x5 束黑熱
Z12N	握柄配件	L20	擊鐵箱軸	EA073	⊕M2.6x14xP0.45 束黑熱
Z13	保險(左)			EA106	止付螺絲 3.0x4 黑 P=0.5
Z14	保險(右)	M12-F10	握柄配件定位軸	EC006	彈簧銷
Z15	止動片	M12-F13	撞針固定軸		
Z16	導管卡榫			X1	內槍管組件
Z17	卡鍵按鈕	EB002	彈簧墊圈	X2	氣缸組件
Z18-1	槍管左蓋	B004	鋼珠	U1	擊鐵組件
Z19-1	槍管右蓋	KMB15-B05	槍管	U2	氣閥組件
Z22	導桿	KCB48-B27	心榫	U3	氣閥頂針組件
Z23	氣缸	KW-B30	氣瓶頂針		

零件有時為了改良而不經預告變更

KCMF15 系列 零件表 KCMF15 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P01	MAGAZINE FOLLOWER	Z45	OUTER BARREL	KMB15-B31-1	VALVE FRAME
P02	MAGAZINE BASE JOINT	Z27	MAGAZINE CATCH	KMB15-B32-1	VALVE REAR
P03	GRIP (L)	Z28	HAMMER GUIDE SPRING ACCESSORY	KG12-B215	PUNCTURE VAVLE PACKING
P04	GRIP (R)	Z51	FRAME		
P06	LOADING NOZZLE			S01	TRIGGER SPRING
P07	FLOATING VALVE	F01	SLIDE TRACK	S02	TRIGGER BAR SPRING
P08	BREECH PACKING	F02	HAMMER STRUT	S03	HAMMER CATCH SPRING
P09	MAGAZINE RIB	F03	MAGAZINE BOTTOM CAP	KMB15-S04-1	HAMMER STRUT SPRING
KMB15-P10	VALVE PACKING			S05	RECOIL SPRING
KG12-P60	MAGAZINE BOTTOM CAP	KMB15-R01	RUBBER CHAMBER	S06	LOADING NOZZLE RECOIL SPRING
		R02	GAS ROUTE PACKING	S07	SAFETY SPRING
A01	SLIDE	G010	O-RING 1x8id	S08	SWITCH SPRING
		G016	O-RING S-4	S09	FULL AUTO CATCH SPRING
Z01	CHASSIS (L)	G020	O-RING S-6	S10-1	SLIDE STOPPER SPRING
Z02	CHASSIS (R)	G039	O-RING 2x15	S12	BARREL PIN BUTTON SPRING
Z03	HAMMER			S13	VALVE LATCH SPRING
Z04	TRIGGER			S14	FIRING PIN SPRING
Z05	HAMMER CATCH	L2	GRIP SCREW	S15	MAGAZINE CATCH SPRING
Z06	TRIGGER BAR	L5	HAMMER CATCH PIN	S18	MAGAZINE SPRING
Z07	FULL AUTO SWITCH PLATE	L7	FULL AUTO CATCH PIN	KG15-S20	VALVE SPRING
Z07S	SEMI AUTO SWITCH PLATE	L12	MAGAZINE RIB PIN	S21	INNER BARREL CASE SPRING
Z08	FULL AUTO SWITCH LEVER	L13	TRIGGER PIN	EA045	SCREW M3x8xP0.5
Z09	FULL AUTO CATCH	L16	FULL/SEMI AUTO SWITCH AXLE	EA046	SCREW M3.0x10
Z10	VALVE LATCH	L17	BLOWBACK BUFFER	EA057	SCREW M2.0x8
Z11	FIRING PIN	L19	OUTER BARRELFRONT PIN	EA061	SCREW 2.3x5
Z12N	GRIP ACCESSORY	L20	CHASSIS PIN	EA073	SCREW M2.6x14xP0.45
Z13	SAFETY (L)			EA106	SCREW M3.0x10
Z14	SAFETY (R)	M12-F10	GRIP ACCESSORY LOCATOR PIN	EC006	SPRING PIN
Z15	SLIDE STOPPER	M12-F13	FIRING PIN POSITION PIN		
Z16	SLIDE CATCH			X1	INNER BARREL UNIT
Z17	BARREL PIN BUTTON	EB002	SPRING WASHER	X2	BREECH UNIT
Z18-1	INNER BARREL CASE (L)	B004	BEARING	U1	HAMMER UNIT
Z19-1	INNER BARREL CASE (R)	KMB15-B05	INNER BARREL	U2	VALVE UNIT
Z22	RECOIL GUIDE	KCB48-B27	VALVE	U3	PUNCTURE VAVLE UNIT
Z23	CYLINDER	KW-B30	PUNCTURE VAVLE		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCMF15 系列 零件分解圖 KCMF15 SERIES EXPLODED VIEW

