

M92



AAKCMB/F23 系列說明書 AAKCMB/F23 INSTRUCTION MANUAL

KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明 OPERATION

1. 取出彈匣
RELEASE MAGAZINE



1. 按下卡榫
Press the button.

2. 取出彈匣
Release the magazine.


▲注意:請勿使彈匣直接掉落地面,以防止變形或損壞。

▲CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用
INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後,置入小鋼瓶B,再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時,請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

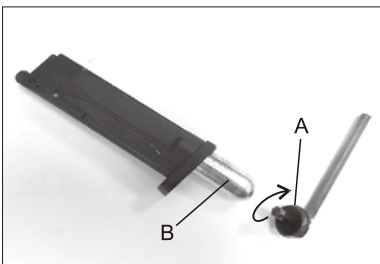


▲注意:為維護彈匣使用壽命,請盡可能不要殘留CO2氣體於彈匣內。

▲CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈
LOADING BB BULLET

彈匣最多可裝18發B.B彈,如強行裝入更多,可能造成不當損壞及無法上膛,請注意。(分2種方式裝彈)

BB's max capacity is 18 rounds. If you load more than this quantity, you would bring any abnormal problems. (BB can be loaded in two ways.)

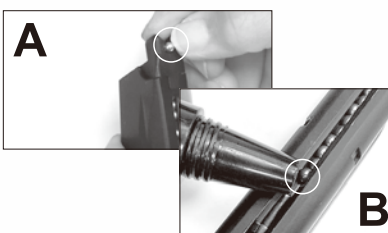

4. 彈匣上膛
INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入,直到彈匣卡榫發出"卡嗒"為止。

Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛
CHAMBERING THE BB

將上蓋往後拉到底,放開上蓋則上蓋會自動回位,同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



▲注意:拉動上蓋時,請勿將手指扣住扳機,以免發生不當射擊,造成危險。

▲CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換
SWITCH SAFETY



7. 單/連發切換
SWITCH SEMI AUTO AND FULL AUTO
將槍口向右在槍尾部有連發開關可以切換。Semi auto and full auto switch on pistol rear right side.



▲注意:上蓋滑動時,注意縫隙夾到手指。

▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

8. 射擊
SHOOTING

對準目標區後扣下扳機,則B.B彈將被射擊出去。Aim the target and pull the trigger. Then the BB will be shot.

故障/BREAK DOWN




▲注意:B.B彈用完時,上蓋會後定卡住。
▲CAUTION: hold open function as real pistol.

3. 往左滑出槍管,本體和上蓋就可分離。
slide outer barrel to the left side to separate frame and slide



4. HOP UP調整
Adjust HOP UP system.

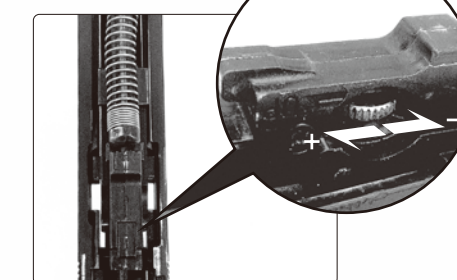


拆解/DISASSEMBLY

1. 按下卡榫,取出彈匣
Press the magazine catch to release the magazine.




2. 請按住右側的上蓋榫件,將左面的上蓋卡榫往下扳後鬆開上蓋。
Push L16 from the right side and spin the slide catch down to unlock the slide.

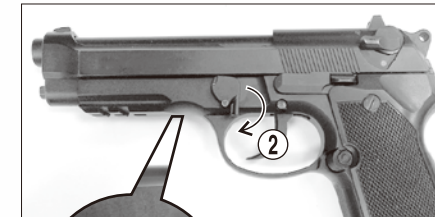


故障的原因與排除 BREAK DOWN FAQ

* 卡彈可能原因:
Possible reasons for BB jam:

- a. 裝彈排列不整齊
BB dose not stack properly.
- b. 不良B.B彈
bad quality BB
- c. 空擊發易造成零件損耗,請避免此動作。
please avoid dry firing as it could cause parts deformed or damage.

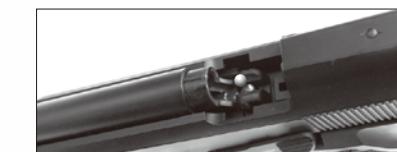



* 排除:將上蓋往後拉,向下倒出即可。
Solution: pull the slide back and pour the BB out from barrel.

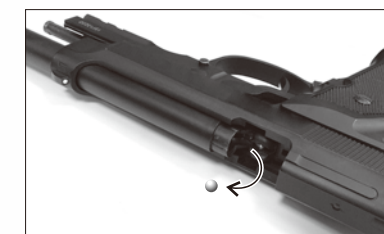

保養及維護 MAINTENANCE GUIDE

當射擊約2000發時,建議你如圖所示,以矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑,以利滑動。

After every 2,000 BB shots, lubricate slide and frame track, hammer and firing pin is recommended. Please see picture below for suggested lubricate area.

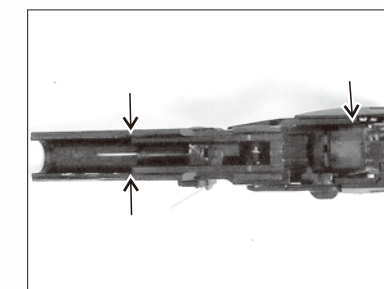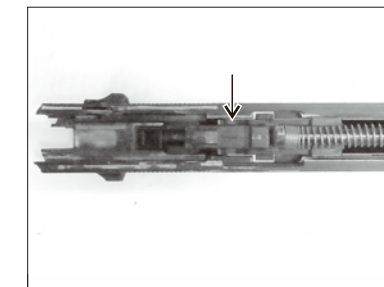

⚠ WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成童年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

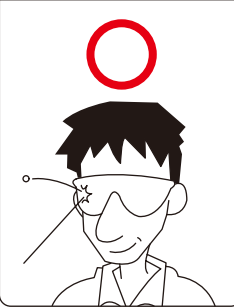


★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。

★Always transport an airgun in a locked carrying case. Make sure it is unloaded and on safe.



★使用低動能遊戲用槍前，請務必詳讀說明書內容。

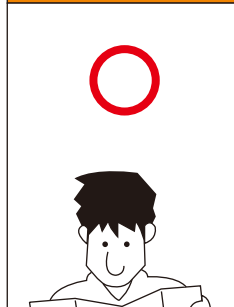


★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or domestic animals. Brandish this airgun in public is dangerous and may be a crime.

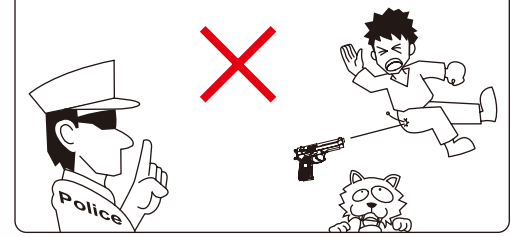


★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

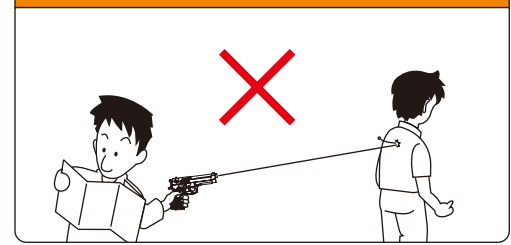

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, void your warranty and may make it unsafe to use.




Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCMB/F23 系列 零件表 AAKCMB/F23 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P01	滑套射嘴	LOADING NOZZLE	Z40	氣缸	CYLINDER	S04	滑套射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING
P02	氣流控制件	FLOATING VALVE	Z41	保險右	SAFETY (R)	S05	連發卡榫扭簧	FULL AUTO CATCH SPRING
P08	彈匣底座配件	MAGAZINE BASE ACCESSORY	Z43	彈匣滑粒4.5mm	MAGAZINE FOLLOWER	S06	導桿回位壓簧	RECOIL GUIDE SPRING
P09	內槍管配件(4.5)	INNER BASE ACCESSORY(4.5)	R01	子彈迫緊	RUBBER CHAMBER	S07	切換連桿扭簧	SHOOTING MODE SWITCH PLATE SPRING
P10	上蓋緩衝件	SLIDE BUFFER	R03	氣嘴迫緊	GAS ROUTE PACKING	S09	彈匣壓簧(4.5mm)	MAGAZINE SPRING
P11	氣缸迫緊配件	CYLINDER PACKING ACCESSORY	R04	O形環 1X5	O-RING 1X5	S10	彈匣卡榫壓簧	MAGAZINE CATCH SPRING
P12	彈匣上部(4.5)	MAGAZINE RIB(4.5)	R05	O形環 2X13	O-RING 2X13	S11	保險回位壓簧	SAFETY RECOIL SPRING
P13	槍柄(左)	GRIP (L)	R06	O形環 S-4(黃)	O-RING S-4	S12	單連發切換件扭簧	SEMI / FULL AUTO SWITCH PLATE SPRING
P14	槍柄(右)	GRIP (R)	R08	O形環 1X6	O-RING 1X6	S13	擊鐵壓簧	HAMMER SPRING
P21	內槍管後套件	INNER BARREL REAR SLEEVE	L01	擊鐵軸套	HAMMER PIN SLEEVE	S14	擊鐵卡榫扭簧	HAMMER CATCH SPRING
P41	心棒迫緊	VALVE PACKING	L2	槍柄螺絲	GRIP SCREW	S15	上蓋卡榫壓簧	SLIDE CATCH SPRING
A01	上蓋	SLIDE	L3	擊鐵卡榫軸套	HAMMER CATCH PIN SLEEVE	S16	扳機扭簧	TRIGGER SPRING
Z01	本體	FRAME	L4	擊鐵箱軸	CHASSIS PIN	S17	單連發選擇鈕壓簧	SEMI / FULL AUTO MODE SPRING
Z02	槍身內套	BARREL BASE	L5	單連發切換鈕螺絲	SEMI / FULL AUTO SWITCH BUTTON SCREW	S18	上蓋止動件扭簧	SLIDE STOPPER SPRING
Z03	擊鐵箱(左)	CHASSIS (L)	L6	單連發切換鈕配件軸	SEMI / FULL AUTO SWITCH BUTTON ACCESSORY PIN	S19	擊鐵卡榫釋放壓簧	HAMMER CATCH RELEASE SPRING
Z04	擊鐵箱(右)	CHASSIS (R)	L7	連發控制件軸	FULL AUTO CONTROL PIN	S20	調整鈕壓簧	ADJUST SPRING
Z05	扳機	TRIGGER	L8	扳機軸	TRIGGER PIN	S21	心棒壓簧	VALVE SPRING
Z06	擊鐵	HAMMER	L9	擊鐵卡榫軸	HAMMER CATCH PIN	E01	Φ11M2.6*8L*P0.45	SCREW M2.6*8L*P0.45
Z07	單發擊鐵卡榫	SEMI AUTO HAMMER CATCH	L10	擊鐵壓簧座軸(大)	HAMMER SPRING BASE PIN (L)	E02	Φ11M2*15*P0.4	SCREW M2*15*P0.4
Z08	撞針	FIRING PIN	L12	彈匣上部軸	MAGAZINE RIB PIN	E03	Φ11M2*L8*P0.4	SCREW M2*L8*P0.4
Z09	撞針卡榫	FIRING PIN CATCH	L15	內槍管(4.5mm)	INNER BARREL	E04	Φ半丸M3X8X0.5 耐滑	SCREW M3X8X0.5
Z10	上蓋卡榫	SLIDE CATCH	L16	上蓋卡榫件	SLIDE CATCH PIN	E06	E型扣環-E1.2	E-RING E1.2
Z13	保險	SAFETY	L18	子彈迫緊調整螺絲	HOP UP ADJUST SCREW	E07	Φ112.3*5尖黑熟	SCREW 2.3*5
Z14	連發擊鐵卡榫	FULL AUTO HAMMER CATCH	L20	保險定位軸	SAFETY LOCATOR PIN	E08	Φ112.3*8束黑熟	SCREW 2.3*8
Z15	切換連桿	SHOOTING MODE SWITCH PLATE	L21	扳機連桿扭簧軸	TRIGGER BAR SPRING PIN	E09	鋼珠 φ2.5	STEEL BALL φ2.5
Z16	單連發切換鈕配件	SEMI / FULL AUTO SWITCH BUTTON ACCESSORY	L22	滑套射嘴軸	LOADING NOZZLE PIN	E10	彈簧墊圈M3.0X0.6T	SPRING GASKET M3.0X0.6T
Z17	單連發切換鈕	SEMI / FULL AUTO SWITCH BUTTON	L29	外槍管固定軸	OUTER BARREL FIXTURE PIN	E41	彈簧銷2x8L鍍黑	SPRING PIN 2*8L
Z18	扳機連桿	TRIGGER BAR	L30	心棒	VALVE	EA067	Φ112.6*L5*P0.45	SCREW 2.6*L5*P0.45
Z19	擊鐵壓簧座	HAMMER SPRING BASE	L31	心棒後部	VALVE REAR	EA106	止付螺絲P=0.5	SET SCREW P=0.5
Z20	上蓋止動件	SLIDE STOPPER	L32	氣閥本體	VALVE FRAME	F01	擊鐵釋放件	HAMMER RELEASE
Z21	彈匣卡榫	MAGAZINE CATCH	L35	保險片固定軸	SAFETY PLATE FIXTURE PIN	F02	擊鐵釋放件連動件	HAMMER RELEASE LINKAGE
Z22	彈匣卡榫配件(左)	MAGAZINE CATCH (L)	L42	扳機軸套	TRIGGER PIN SLEEVE	F03	連發擊鐵卡榫連動件	FULL AUTO HAMMER CATCH LINKAGE
Z23	彈匣卡榫配件(右)	MAGAZINE CATCH (R)	L43	保險連動件軸	SAFETY LINKAGE PIN	F04	擊鐵壓簧導桿	HAMMER SPRING GUIDE
Z24	背帶扣	STRAP RING	L44	擊鐵壓簧座軸(小)	HAMMER SPRING BASE (S)	F05	保險連動件	SAFETY LINKAGE
Z28	鋼瓶鎖緊件	MAGAZINE BOTTOM CAP	B26	氣瓶頂針M16	PUNCTURE VALVE M16	F06	扳機連桿固定件	TRIGGER BAR FIXTURE
Z33	槍管蓋(左)	INNER BARREL CASE (L)	B215	氣瓶頂針迫緊	PUNCTURE VALVE PACKING	X1	內槍管組件	INNER BARREL UNIT
Z34	槍管蓋(右)	INNER BARREL CASE (R)	S01	氣流控制件壓簧	FLOATING VALVE SPRING	X2	氣缸組件	CYLINDER UNIT
Z36	外槍管	OUTER BARREL	S02	撞針扭簧	FIRING PIN SPRING	U1	擊鐵組件	HAMMER UNIT
Z38	子彈迫緊調整件	HOP UP ADJUSTMENT	S03	擊鐵連桿壓簧	HAMMER CONNECTOR SPRING	U2	氣瓶頂針組件	PUNCTURE VALVE UNIT
Z39	回位導桿	RECOIL GUIDE				U3	氣閥組件	VALVE UNIT

AAKCMB/F23 系列 零件分解圖 AAKCMB/F23 SERIES EXPLODED VIEW

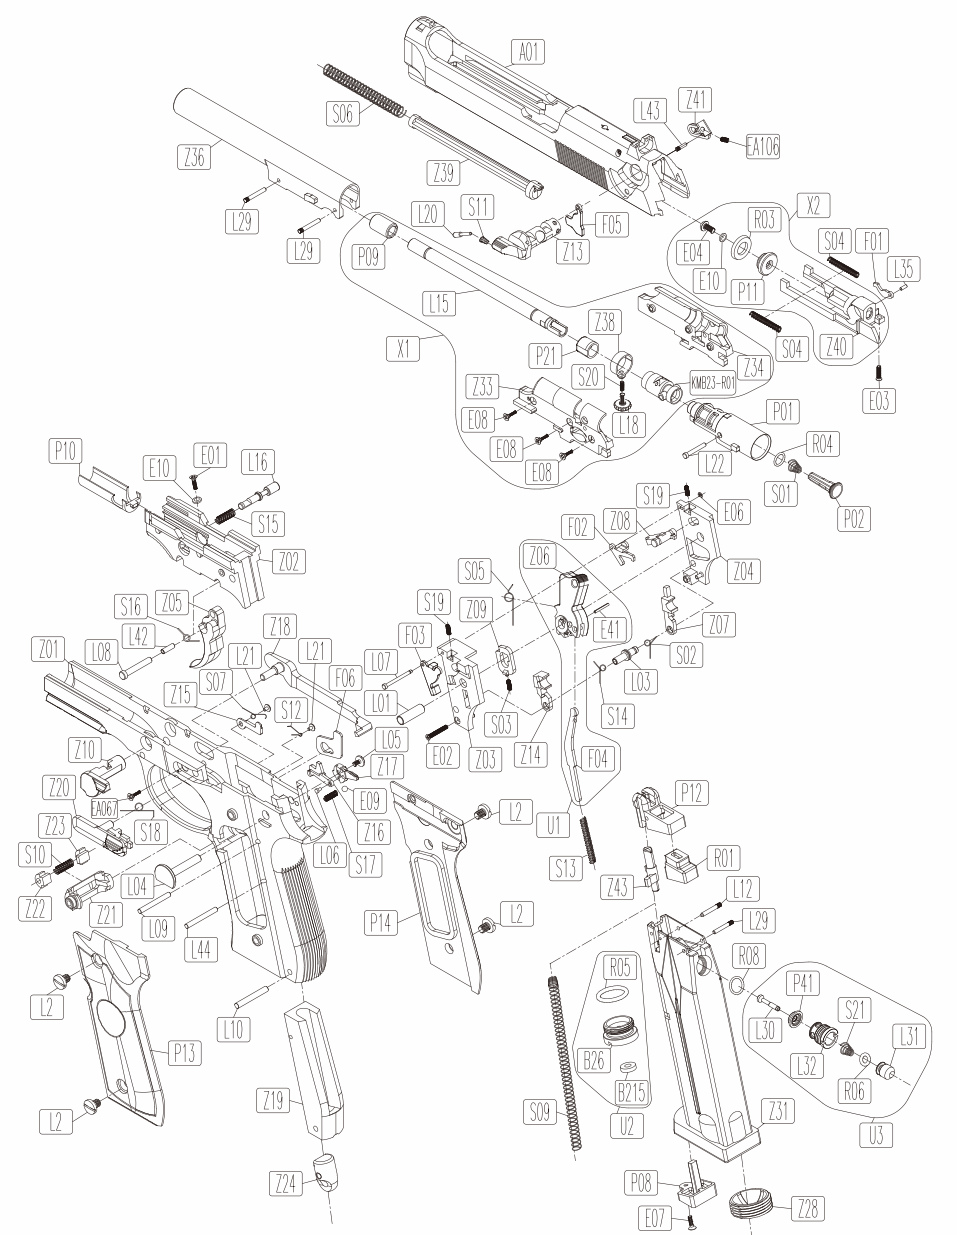

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.