



AAKCCB88、89系說明書

AAKCCB88、89 INSTRUCTION MANUAL



KWC KIWEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE


- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

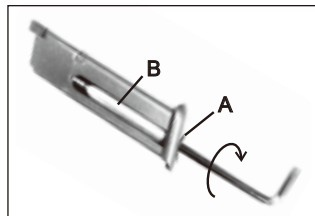


- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。For smooth shooting, Load BBs one by one.

 - ▲ 注意: 彈匣最多可裝15發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
- ▲ CAUTION: Magazine max capacity is 15 rounds. Loading more than this quantity could bring malfunctions.



4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身上推入, 直到彈匣卡榫發出“卡嗒”為止。Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.



6. 保險切換 SWITCH SAFETY

- ▲ 注意: 必須在上膛狀態下保險才可關閉。
- ▲ CAUTION: Safety can only be turned on when this airsoft is cocked.




- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.



7. KCCB-88後準星調整 KCCB-88 REAR SIGHT ADJUSTMENT

上下準星調整
Vertical adjustment

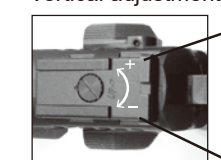


準星向上
Rear sight move up



準星向下
Rear sight move down

左右準星調整
Horizontal adjustment

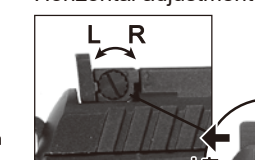

L 左 R 右

8. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.



拆解 / DIS-ASSEMBLY



1. KCCB-89系列需先卸下鏡橋, 以方便拆解。
Please take off the mount on KCCB89 before disassemble the gun.



2. 按下卡榫, 取出彈匣。
Press the magazine catch to release the magazine.



3. 退上蓋至導管卡榫。
Pull the slide until the slide stopper lock the slide.

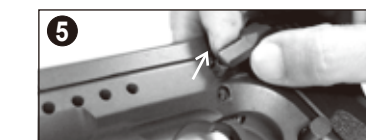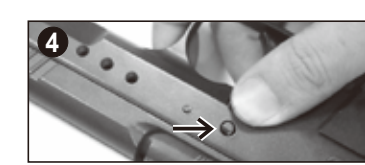

5. 導管卡榫左面往上推, 上蓋即可取出。
Pull the slide stopper from left side of pistol to take off the slide.

4. 壓下槍身右面卡榫。
Press the pin on the right side of frame.




6. HOP UP 調整。
Adjust HOP UP system.

故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:

- 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- 不良B.B彈
Bad quality BBs.
- 空擊發易造成零件損耗, 請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.

* 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.

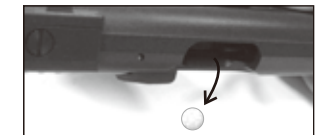

保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.





WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on a safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airsoft.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airsoft.

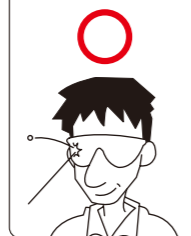


★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

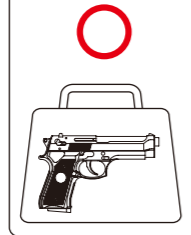

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airsoft.

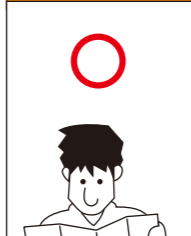

★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.




★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

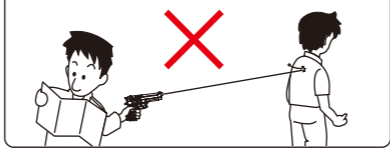

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

KCB-88、89 系列 零件表 KCB-88、89 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P03	滑套射嘴	Z56	槍管導桿 長-89用	S03	彈匣卡榫扭簧
P12	彈匣底座配件	Z57	槍管導桿 短-88用	S04	止動片扭簧
P13	彈匣上部	Z58	導桿套	S05	擊鐵壓簧
P14	子彈迫緊可調旋鈕	F01	擊鐵壓簧導桿	S06	擊鐵卡榫扭簧
P16	氣流控制件	F03	鈹機連桿	S07	撞針扭簧
P17	彈匣滑粒	F05	子彈迫緊調整片	S08	鈹機連桿拉簧
P21	彈匣卡榫固定件	F06	回位導桿華司	S09	回位壓簧
P41	心棒迫緊	R01	氣嘴迫緊	S14	保險壓簧
P60	彈匣底內件	KR02-H	子彈迫緊(HOP-UP)	S19	氣流控制件壓簧
P112	氣缸迫緊	G008	O型環 1x6id	S20	心棒壓簧
A01	上蓋	G002	O型環 1x2id	S21	後準星壓簧
A05	鏡橋	G016	O型環 S-4	S22	後準星左右調整壓簧
Z01	擊鐵箱右蓋	G039	O型環 2x15	S25	導桿緩衝壓簧
Z02	本體			EA045	螺絲 ϕM3x8xP0.5
Z03	擊鐵卡榫	B001	鋼珠 1.0	EA061	螺絲 Ⅲϕ2.3x5
Z07	上蓋止動片	KCB75-B02	彈匣上部軸	EA064	螺絲 Ⅲϕ2.3x6
Z08	擊鐵	B02	鈹機軸	EA066	螺絲 Ⅲϕ2.3x8
Z09	鈹機	B03	保險軸	EA083	內六角螺絲M3x10LxP0.5
Z10	保險釋放件	B04	止動片扭簧軸	EA086	內六角螺絲M3x30LxP0.5
Z11	彈匣卡榫	B05	擊鐵箱軸	EA094	Ⅲ內六角螺絲M4x8LxP0.7
Z20	氣缸	B06	射嘴壓簧導軸	EA104	內六角止付螺絲 M3x3LxP0.5 黑
Z23	前準星	B10	內槍管	EA109	內六角止付螺絲 M4x6LxP0.7 黑
Z24	撞針	B11	擊鐵軸	EB002	彈簧墊圈M3.0x0.6T
Z25	擊鐵箱左蓋	B15	後準星上下調整螺絲	EB006	碟型墊圈M4x1.0T.
Z26	擊鐵箱中蓋	B16	後準星左右調整螺絲	EC012	彈簧樹2.5*8
Z27	槍管左蓋	KCB72-B17	後準星座軸	EF009	六角扳手
Z28	槍管右蓋	B17	氣閥本體		
Z31	後準星	B18	心棒後部	U3	氣閥組件
Z32	槍管導管	B20	上蓋前罩連接件	U4	氣瓶頂針組件
Z45	保險左	B21	上蓋拉桿	U5	擊鐵箱組件
Z46	保險右	B30	氣瓶頂針	U6	擊鐵組件
Z51	槍柄座	B33	心棒	U7	後準星組件
Z52	槍柄左	B37-6	氣缸迫緊墊圈	U8	鈹機組件
Z53	槍柄右	B215	氣瓶頂針迫緊	X1	氣缸半組件
Z54	上蓋前罩-89用	S01	彈匣壓簧	X2	內槍管組件
		S02	射嘴回位壓簧		

零件有時為了改良而不經預告變更

KCB-88、89 系列 零件表 KCB-88、89 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P03	LOADING NOZZLE	Z56	RECOIL GUIDE ROD(89)	S03	MAGAZINE CATCH SPRING
P12	MAGAZINE BASE ACC.	Z57	RECOIL GUIDE ROD(88)	S04	SLIDE STOPPER SPRING
P13	MAGAZINE RIB	Z58	RECOIL GUIDE ROD CAP	S05	HAMMER SPRING
P14	HOP UP ADJUSTOR	F01	HAMMER SPRING BAR	S06	HAMMER CATCH SPRING
P16	FLOATING VALVE	F03	TRIGGER BAR	S07	FIRING PIN SPRING
P17	MAGAZINE FOLLOWER	F05	HOP-UP ADJUST PLATE	S08	TRIGGER BAR SPRING
P21	MAGAZINE CATCH JOINT	F06	RECOIL GUIDE ROD WASHER	S09	RECOIL SPRING
P41	VALVE PACKING	R01	GAS ROUTE PACKING	S14	SAFETY SPRING
P60	MAGAZINE BOTTOM CAP	KR02-H	RUBBER CHAMBER (HOP-UP)	S19	FLOATING VALVE SPRING
P112	CYLINDER PACKING	G008	O-RING 1x6id	S20	VALVE SPRING
A01	SLIDE	G002	O-RING 1x2id	S21	REAR SIGHT SPRING
A05	OPTIC MOUNT	G016	O-RING S-4	S22	REAR SIGHT ADJUST SPRING (L & R)
Z01	CHASSIS (R)	G039	O-RING 2x15	S25	RECOIL GUIDE ROD BUMPER SPRING
Z02	FRAME			EA045	SCREW M3x8xP0.5
Z03	HAMMER CATCH	B001	STEEL BALL	EA061	SCREW 2.3x5
Z07	SLIDE STOPPER	KCB75-B02	MAGAZINE RIB PIN	EA064	SCREW 2.3x6
Z08	HAMMER	B02	TRIGGER PIN	EA066	SCREW 2.3x8
Z09	TRIGGER	B03	SAFETY PIN	EA083	SCREW M3x10LxP0.5
Z10	SAFETY RELEASE	B04	SLIDE STOPPER SPRING PIN	EA086	SCREW M3x30LxP0.5
Z11	MAGAZINE CATCH	B05	CHASSIS PIN	EA094	SCREW M4x8LxP0.7
Z20	CYLINDER	B06	FLOATING NOZZLE SPRING PIN	EA104	SCREW M3x3LxP0.5
Z23	FRONT SIGHT	B10	INNER BARREL	EA109	SCREW M4x6LxP0.7
Z24	FIRING PIN	B11	HAMMER PIN	EB002	SPRING WASHER M3.0x0.6T
Z25	CHASSIS (L)	B15	REAR SIGHT ADJUST SCREW (UP & DOWN)	EB006	SPRING WASHER M4x1.0T.
Z26	CHASSIS (M)	B16	REAR SIGHT ADJUST SCREW(R & L)	EC012	SCREW 2.5x8
Z27	BARREL CASE (L)	KCB72-B17	REAR SIGHT BASE PIN	EF009	WRENCH
Z28	BARREL CASE (R)	B17	VALVE FRAME		
Z31	REAR SIGHT	B18	VALVE REAR	U3	INNER VALVE UNIT
Z32	REAR SIGHT COVER	B20	COMPENSATOR CONNECTOR (89)	U4	PUNCTURE VALVE UNIT
Z45	SAFETY (L)	B21	SLIDE COCKING BAR(89)	U5	CHASSIS UNIT
Z46	SAFETY (R)	B30	INNER VALVE	U6	REAR SIGHT UNIT
Z51	GRIP BASE	B33	VALVE	U7	HAMMER UNIT
Z52	GRIP (L)	B37-6	CYLINDER PACKING RING	U8	TRIGGER UNIT
Z53	GRIP (R)	B215	PUNCTURE VALVE PACKING	X1	CYLINDER UNIT
Z54	COMPENSATOR(89)	S01	MAGAZINE SPRING	X2	INNER BARREL UNIT
		S02	LOADING NOZZLE RECOIL SPRING		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCB-88、89 系列 零件分解圖 KCB-88、89 SERIES EXPLODED VIEW

