

M40

NON-BLOWBACK
STEEL
BBS
AIR GUN
ER

 


CO2 Cartridge is not included

MADE IN TAIWAN

AAKCMD48 系說明書

AAKCMD48 INSTRUCTION MANUAL

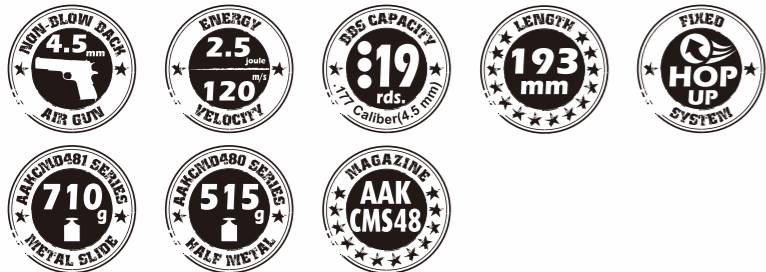

KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

射擊前的準備 BEFORE SHOOTING



 
1. 按下卡榫
Press the button
2. 取出彈匣
Release the magazine

3. 使用六角扳手反時針方向取出彈匣底內件。

Use hexagonal wrench to remove the magazine cap by counter-clockwise.



4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap out counter-clockwise, and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

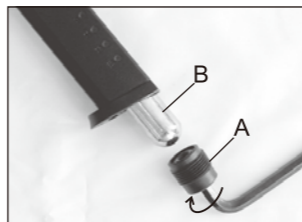

5. 拉下滑粒。
Pull the magazine follower down.

6. 填裝B.B彈。
Loading BBs.
為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.



7. 最多可裝19粒。
Maximum BB capacity is 19 rounds.

射擊 SHOOTING

1. 將裝好B.B彈的彈匣插入槍身往上推入，直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.



2. 瞄準目標物扣引扳機，即可擊發。
Aim the target and pull the trigger.

▲ 注意：在長期不使用的狀態下，請將彈匣內的氣體洩放掉。

▲ CAUTION: Release all of the gas in the magazine when it will not use in long-term period.



安全裝置 SAFETY



故障原因與排除 / BREAKDOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的 B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use high quality BB avoid jamming problem.
2. 當卡彈時，請盡可能先取出彈匣，再以不傷槍管的軟質細棒（不可大於4.4mm直徑），從槍口置入清除。
When BB jamming, first please release the magazine from pistol then use a soft stick (diameter no bigger than 4.4mm) to clear up the barrel.
3. 空擊發易造成零件損耗，請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.
4. 當扣引扳機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。
Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.
5. 使用一段時間後，請再次用含矽油之潤滑油，潤滑扳機軸心。
Please spray lubricant(with silicone oil type) at trigger pin after a certain of use, pictures shown.



WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

 
1. 除了發射時外，不要將手指頭掛在扳機上。
2. 選擇安全與適當標靶。
3. 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
4. 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
5. 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
6. 請妥善保管產品在未成年孩童無法伸手取得的場所。
7. 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
8. 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
9. 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
10. 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

1. Do not put your finger on the trigger except shooting.
2. Please choose safe and proper target.
3. Please always keep the airgun on safe and unloaded when not using.
4. Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
5. To avoid ricochet. Never shoot at a hard or flat surface or at water.
6. Keep the airgun out of reach for underage children.
7. Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
8. Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airgun.
9. Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
10. Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

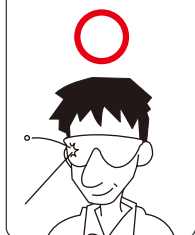


★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.



★使用低動能遊戲用槍前，請務必詳讀說明書內容。

 ★Read the owner's manual before using the airgun.

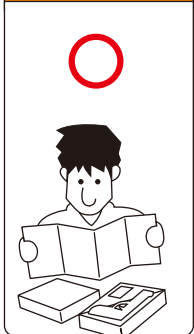

★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.



★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.



 
★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至屬法送辦。

★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

KCMD48 系列 零件表 KCMD48 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P01	上蓋(塑膠)	B02	槍管	SM04	鈹機連動件扭簧
P02	本體	B07	氣瓶頂針	SM05	鈹機連動件壓簧
P04	上蓋止動片	B15	RKM系心棒(二孔)	SM06	鈹機扭簧
P17	保險(右)	B19	心棒蓋		
P19	握柄配件	B40	撞針軸套	E02	⊕2.3X8 螺絲
P27	槍管套	B215	氣瓶頂針迫緊	E03	⊕Ⓜ2.3X5螺絲
P29	上蓋後罩	B801	鈹機軸套	E05	E型扣環
P31	心棒蓋迫緊				
P60	彈匣底內件	F401	心棒壓簧墊圈	R02	O形環 1.45X6.9id
P804	彈匣滑粒	F408	撞針軸	R03	O形環 1X5
P805	導管卡榫	F804	鈹機連桿	R04	O型環 1X4
P807	彈匣卡榫	KA11-F04	軸(擊鐵箱)	R05	O型環 0.8X11.3id
P811	擊鐵箱(左)	M21-F03	軸(擊鐵箱)	R09	O形環 2X11
P812	擊鐵箱(右)	EC022	彈簧銷	R10	O形環 S-10
P818	底座定位件				
		S807	導桿壓簧	U02	六角鈹手
Z01	上蓋(金屬)	S404	心棒壓簧	U1	內槍管組件
Z468	鈹機連動件	S471	彈匣壓簧	U2	氣瓶頂針組件
Z496	槍管連動件	S613	彈匣卡榫線簧		
Z802	撞針	S801	鈹機連桿拉簧		
Z803	鈹機	S804	撞針緩衝扭簧		
R01	子彈迫緊HOP-UP	SM03	撞針扭簧		

零件有時為了改良而不經預告變更

KCMD48 系列 零件表 KCMD48 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P01	SLIDE (PLASTIC)	B02	BARREL	SM04	TRIGGER CONNECTOR SPRING #04
P02	FRAME	B07	PUNCTURE VAVLE	SM05	TRIGGER CONNECTOR SPRING #05
P04	SLIDE STOPPER	B15	VAVLE	SM06	TRIGGER SPRING
P17	SAFETY (R)	B19	VALVE CAP		
P19	GRIP PLUG	B40	FIRING PIN SLEEVE	E02	SCREW 2.3X8
P27	OUTER BARREL CAP	B215	PUNCTURE VAVLE PACKING	E03	SCREW 2.3X5
P29	SLIDE REAR CAP	B801	TRIGGER SLEEVE	E05	E-RING
P31	VALVE PACKING				
P60	MAGAZINE BOTTOM CAP	F401	VALVE SPRING GASKET	R02	O-RING 1.45X6.9
P804	MAGAZINE FOLLOWER	F408	FIRING PIN AXLE	R03	O-RING 1X5
P805	BARREL CATCH	F804	TRIGGER BAR	R04	O-RING 1X4
P807	MAGAZINE CATCH	KA11-F04	PIN (CHASSIS) #04	R05	O-RING 0.8X11.3
P811	CHASSIS (L)	M21-F03	PIN (CHASSIS) #03	R09	O-RING 2X11
P812	CHASSIS (R)	EC022	SPRING PIN	R10	O-RING S-10
P818	MAGAZINE BASE JOINT				
		S807	RECOIL SPRING	U02	WRENCH
Z01	SLIDE (METAL)	S404	VALVE SPRING	U1	INNER BARREL UNIT
Z468	TRIGGER CONNECTOR	S471	MAGAZINE SPRING	U2	PUNCTURE VAVLE UNIT
Z496	BARREL TOW	S613	MAGAZINE CATCH SPRING		
Z802	FIRING PIN	S801	TRIGGER BAR SPRING		
Z803	TRIGGER	S804	FIRING PIN BUFFER SPRING		
R01	RUBBER CHAMBER	SM03	FIRING PIN SPRING		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCMD48 系列 零件分解圖 KCMD48 SERIES EXPLODED

