

WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.

THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.



DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C



PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm²

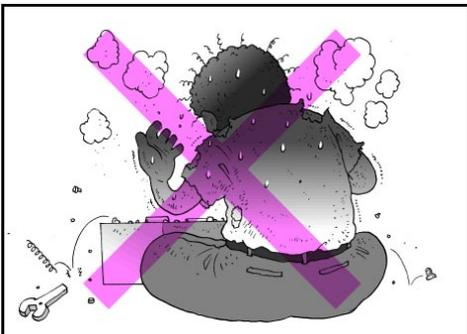

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.



BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.



DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE


OPERATION

1. REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2. FILLING GAS

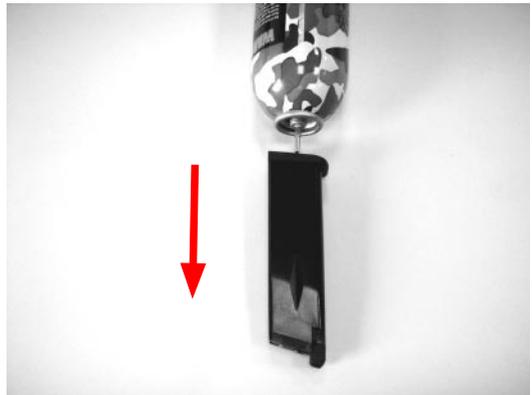

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTION.

3.LOAD BB BULLETS



LOAD BULLETS

4.INSERT MAGAZINE



5.LOAD



PULL THE SLIDE COMPLETELY TO THE REAR.

6.FIRE



PULL THE TRIGGER.

7.SAFETY



SAFETY OFF (READY FOR FIRE)



SAFETY ON

DISASSEMBLY

1. REMOVE THE SLIDE STOP



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE. MOVE THE SLIDE REAR UNTIL THE TAKEDOWN NOTCH IS JUST ABOVE THE SLIDE STOP TAB AND REMOVE SLIDE STOP


2. REMOVE THE SLIDE



3. REMOVE THE RECOIL SPRING AND SPRING CAP



4. REMOVE THE BARREL

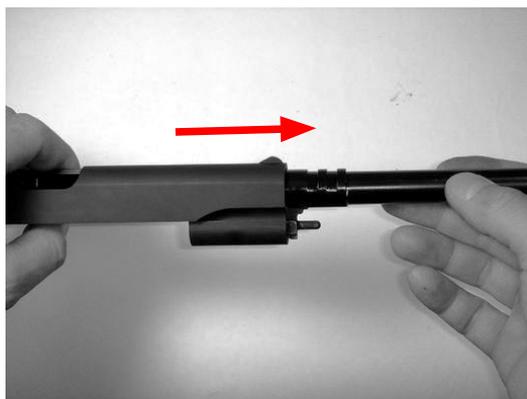

ASSEMBLY


REVERSE THE DISASSEMBLY ORDER

ADJUST TREJECTORY




TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.


PLEASE ADJUST ACCORDING TO TREJECTORT

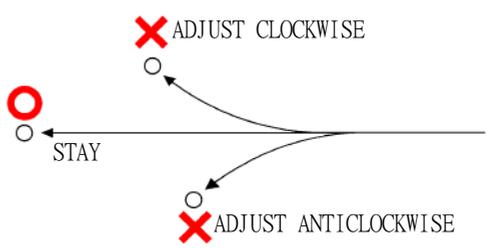

KP-05 EXPLODED DRAWING

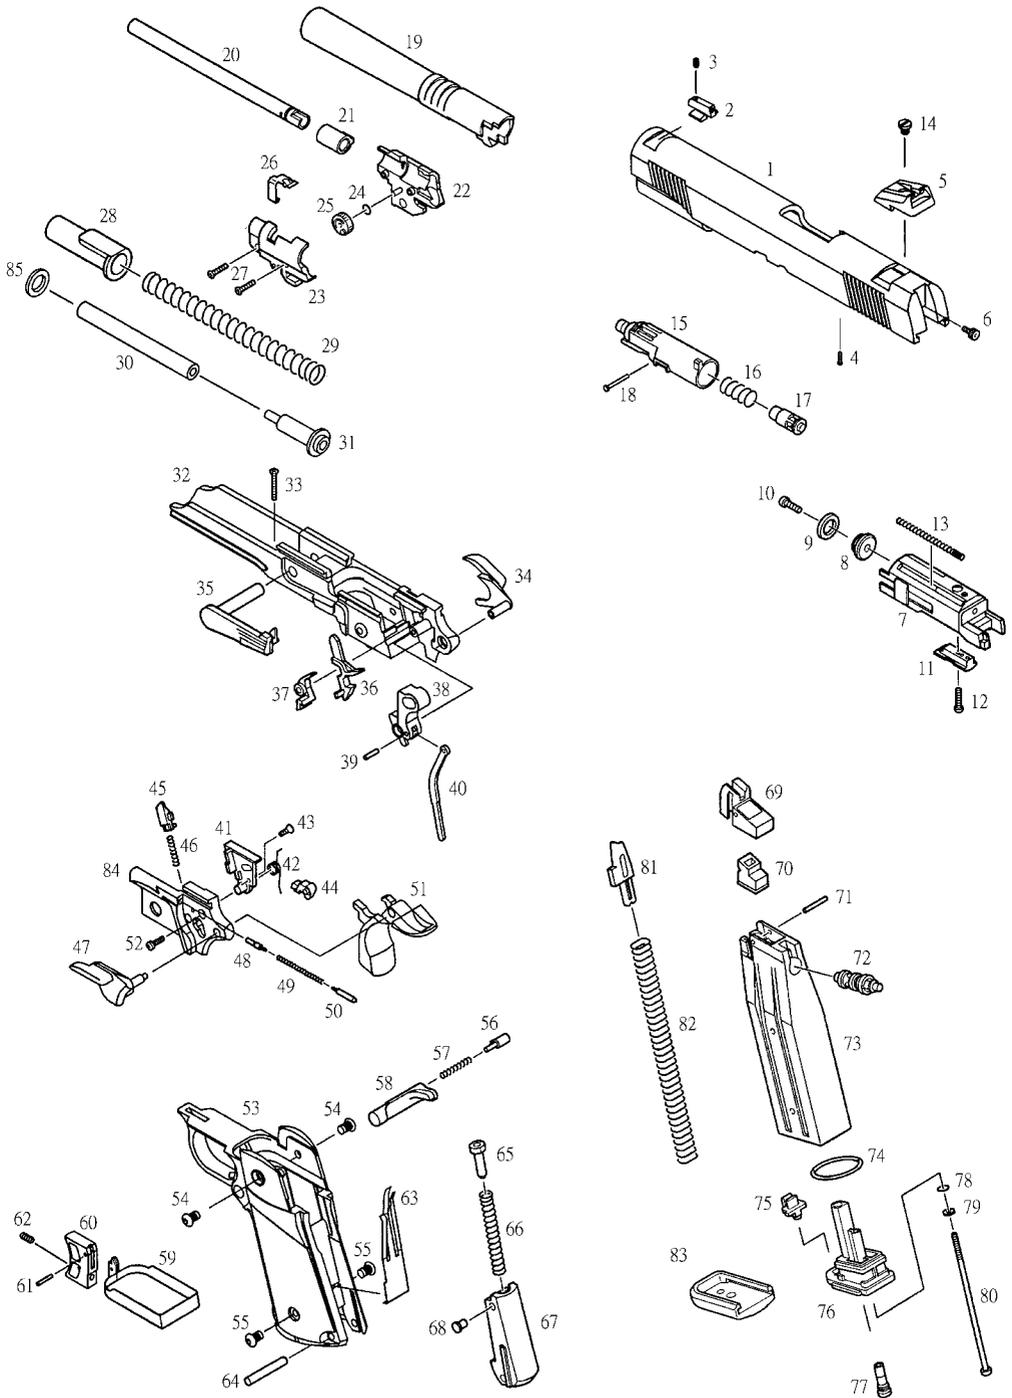

| No. | Name of Part | Price | No. | Name of Part | Price |
|-----|--------------------------|-------|-----|----------------------------|-------|
| 1 | Slide | 1600 | 47 | Safety (Left) | 150 |
| 2 | Front Sight | 120 | 48 | Slide Stop Plunger | 50 |
| 3 | Front Sight Screw | 10 | 49 | Slide Stop Plunger Spring | 15 |
| 4 | Cylinder Screw | 10 | 50 | Safety Plunger | 50 |
| 5 | Rear Sight | 150 | 51 | Grip Safety | 240 |
| 6 | Firing Pin Stop Screw | 20 | 52 | Chassis Cover Screw | 10 |
| 7 | Piston | 400 | 53 | Grip | 800 |
| 8 | Ring Head | 40 | 54 | Grip Screw A | 20 |
| 9 | Ring | 20 | 55 | Grip Screw B | 20 |
| 10 | Ring Head Screw | 10 | 56 | Magazine Catch Lock | 30 |
| 11 | Piston Part | 30 | 57 | Magazine Catch Spring | 10 |
| 12 | Piston Part Screw | 10 | 58 | Magazine Catch | 120 |
| 13 | Cylinder Return Spring | 20 | 59 | Trigger Bar | 150 |
| 14 | Rear Sight Screw | 20 | 60 | Trigger | 240 |
| 15 | Cylinder | 150 | 61 | Trigger Pin | 10 |
| 16 | Cylinder Valve Spring | 20 | 62 | Trigger adjust Screw | 20 |
| 17 | Cylinder Valve | 20 | 63 | Sear Spring | 100 |
| 18 | Cylinder Valve Stopper | 20 | 64 | Housing Pin | 50 |
| 19 | Outter Barrel | 600 | 65 | Hammer Spring Plunger | 30 |
| 20 | Inner Barrel | 180 | 66 | Hammer Spring | 70 |
| 21 | Rubber Chamber | 80 | 67 | Hammer Spring Housing | 120 |
| 22 | Chamber Cover (Right) | 140 | 68 | Plunger Stopper | 40 |
| 23 | Chamber Cover (Left) | 140 | 69 | BB Lip Pin | 60 |
| 24 | O-Ring | 10 | 70 | Magazine Gasket | 80 |
| 25 | Adjust Dial | 20 | 71 | BB Lip Pin | 10 |
| 26 | Adjust Lever | 50 | 72 | Valve | 150 |
| 27 | Chamber Cover Screw | 10 | 73 | Magazine Case | 400 |
| 28 | Recoil Plug | 200 | 74 | O-Ring | 20 |
| 29 | Recoil Spring | 60 | 75 | Magazine spring Retainer | 20 |
| 30 | Recoil Spring Guide A | 100 | 76 | Magazine Base | 180 |
| 31 | Recoil Spring Guide B | 150 | 77 | Filling Valve | 70 |
| 32 | Chassis | 600 | 78 | O-Ring | 10 |
| 33 | Chassis Screw | 10 | 79 | Washer | 10 |
| 34 | Safety (Right) | 150 | 80 | Magazine Base Screw | 20 |
| 35 | Slide Stop | 200 | 81 | Follower | 30 |
| 36 | Disconnecter | 80 | 82 | Follower Spring | 50 |
| 37 | Sear | 60 | 83 | Magazine Bottom | 120 |
| 38 | Hammer | 150 | 84 | Chassis Cover | 200 |
| 39 | Hammer Pin | 10 | 85 | Recoil Spring Guide Buffer | 30 |
| 40 | Hammer Strut | 50 | | | |
| 41 | Chassis Cover Part | 80 | | | |
| 42 | Knocker Spring | 30 | | | |
| 43 | Chassis Cover Part Screw | 10 | | | |
| 44 | Knocker | 40 | | | |
| 45 | Knocker Lock | 50 | | | |
| 46 | Knocker Lock Spring | 20 | | | |

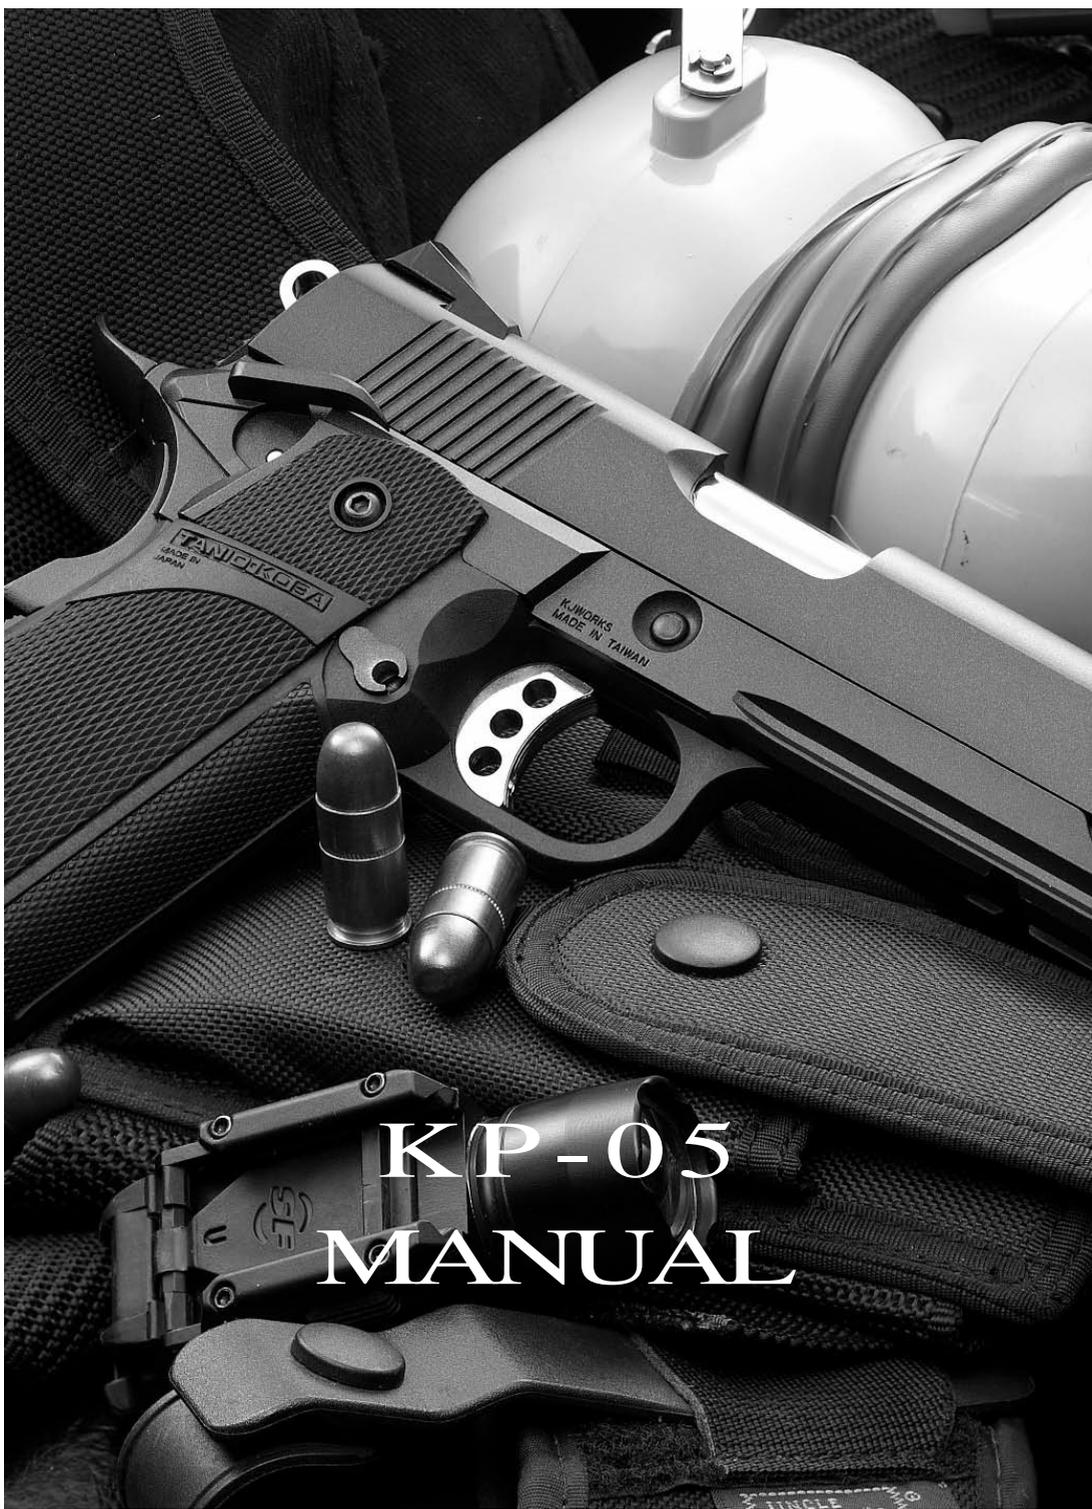

KP-05
MANUAL

KJWORKS