


# WARNING: BEFORE USAGE, THE INSTRUCTION MUST BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.

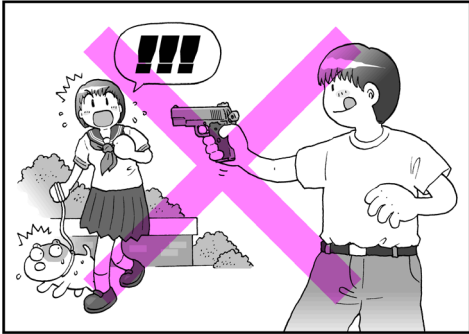

DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C

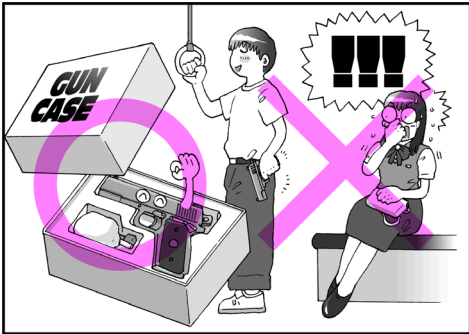

PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm<sup>2</sup>

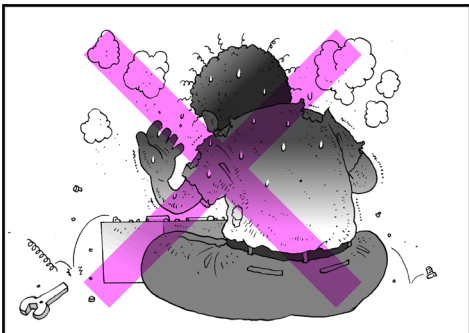

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.




BE CAREFULL WHAT TARGET YOU SHOOT



Eye protection device must be equipped



Do not load anything but BB bullets.

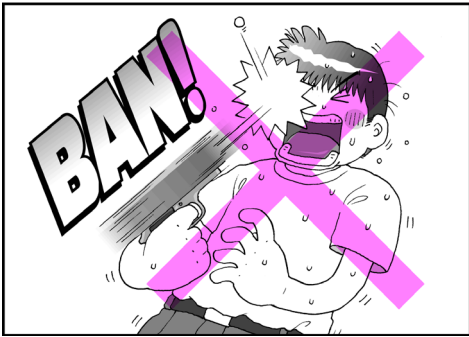


Do not look through the barrel



Please shoot in safe place

# OPERATION

## 1. REMOVE THE MAGAZINE

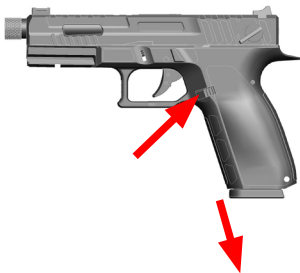


Press magazine catch and remove magazine

## 2. FILLING GAS


GAS MAG

CO2 MAG

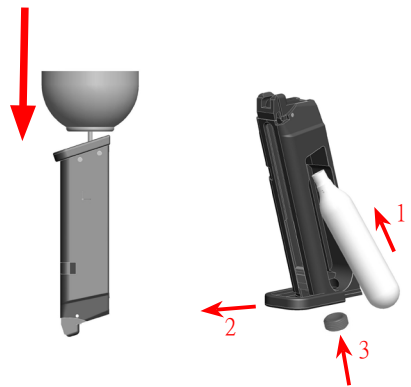

**GAS MAG:**  
 Fill the gas bottle to the magazine in vertical direction.  
**CO2 MAG:**  
 Follow the instruction to insert the cartridge

### 3.LOAD BB

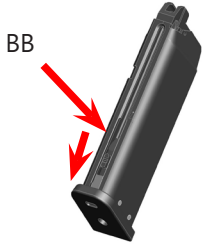

PULL DOWN FOLLOWER AND LOAD BB.

### 4 INSERT MAGAZINE




### 5.LOAD



PULL THE SLIDE TO LOAD

### 6.FIRE

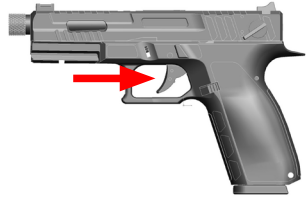


PULL THE TRIGGER

### 7.FIRE MODE


FULLAUTO

SEMIAUTO

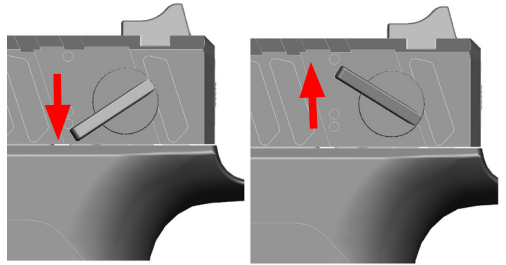


### 8.SAFE

SAFETY ON

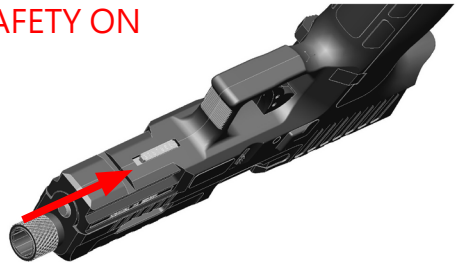

SWITCH TO ON POSITION


# SAFETY OFF

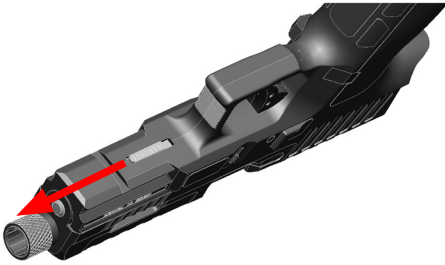

SWITCH TO OFF POSITION

## DISASSEMBLY


1. PULL BACK SLIDE AND PULL DOWN SLIDE LOCK

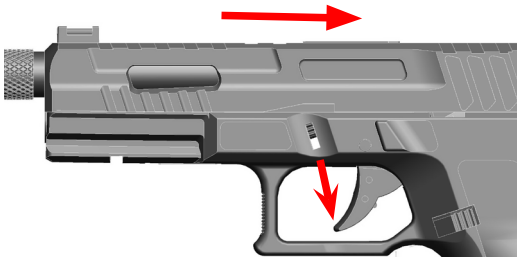

2. REMOVE THE SLIDE



3. REMOVE THE RECOIL SPRING AND GUIDE

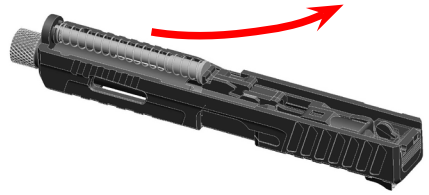


4. REMOVE THE BARREL




## ASSEMBLY

REVERSE THE DISASSEMBLY  
ADJUST TREJECTORY

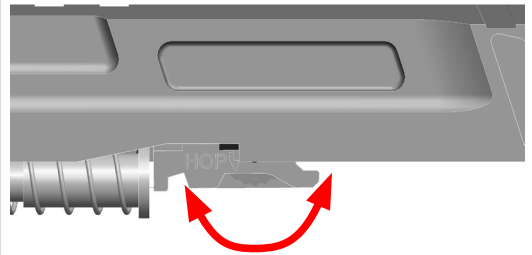

TURN ADJUST DIAL ACCORDING TO THE TREJECTORY

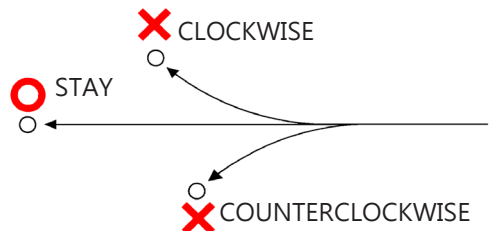



NO.	NAME	PRICE	NO.	NAME	PRICE
1	SLIDE	2200	48	KNOCKER	120
2	FRONT SIGHT	120	49	HAMMER	150
2-1	FRONT OPTICAL FIBER	30	51	HAMMER SP	30
3	REAR SIGHT	120	52	SEAR	80
4	FRONT SIGHT SCREW	20	53	SEAR SP	30
5	FLOATING VALVE PIN	30	54	FRAME	800
6	CYLINDER	180	55	SAFETY	120
7	FLOATING VALVE SP	20	56	MAG CATCH SP	30
8	FLOATING VALVE	30	57	TRIGGER PIN	20
9	FLOATING VALVE BLOCKER	40	58	MAG CATCH	160
10	PISTON RING	50	59	HAMMER HOUSING PIN	20
11	CYLINDER SP	30	60	SLIDE LOCK	80
12	PISTON SCREW	10	61	BB LIP	80
13	PISTON	400	62	GASKET	100
14	REAR SIGHT SCREW	10	63	BB LIP PIN	20
15	OUTTER BARREL	850	64	EX VALVE	180
16	INNER BARREL	240	65	MAG BODY	450
17	CHAMBER (R)	160	66	FOLLOWER	40
18	CHAMBER(L)	160	67	FOLLOWER SP	60
19	ADJUST DIAL O-RING	10	68	MAG BOTTOM STOP	30
20	ADJUST DIAL	40	69	MAG BOTTOM	150
21	CHAMBER SCREW	20	70	MAG BASE O-RING	30
22	ADJUST LEVER	60	71	MAG BASE	200
23	RUBBER CHAMBER	80	72	CHARGE VALVE	80
24	RECOIL GUIDE	160	73	STAB	100
25	RECOIL GUIDE WASHER	40	73-5	STAB O-RING	20
26	RECOIL SP	60	74	MAG BASE NUT(CO2 MAG)	100
28	MAG BODY (CO2 MAG)	450	75	MAG BASE PIN	20
29	SLIDE PAD	60	76	MAG BOTTOM STOP DETENT	20
30	TRIGGER HOUSING	300	81	MAG BOTTOM STOP	30
31	TRIGGER HOUSING SCREW	10	84	EX-VALVE	240
32	SAFETY SP PIN	20	84-5	EX VALVE O-RING	20
34	TRIGGER BAR SP	30	88	RECOIL GUIDE PAD	40
35	TRIGGER BAR	200	89	MAG CATCH SP SCREW	10
36	TRIGGER	120	91	AUTO SEAR SPRING	30
37	TRIGGER SAFETY	60	94	FIRE SELECTOR	150
38	TRIGGER SAFETY PIN	20	95	LEVER HOUSING	150
39	SLIDE STOP SP	30	96	LEVER	150
40	SLIDE STOP	100	97	HAMMER CAM	180
41	SAFETY SP	30	98	AUTO SEAR	150
42	HAMMER HOUSING SCREW	10	99	SELECTOR DETENT	60
43	HAMMER HOUSING	300	100	AUTO SEAR PIN	30
44	HAMMER PIN	20	101	SELECTOR SPRING	30
45	VALVE LOCK	60	103	LEVER SPRING	30
46	SEAR PIN	20	104	HAMMER CAM SPRING	30
47	VALVE LOCK SP	20	105	BARREL CAP	150

# KP-13F

## MANUAL

# KJWORKS

Kjworks No.12 Lian-Ming 1st Street,Bade City,Taoyuan county,Taiwan  
Tel:03-3749793 Fax:03-3618130 e-mail:kjworks@ms47.hinet.net  
[www.kjworks.com.tw](http://www.kjworks.com.tw)